



LED ALARM CLOCK OPERATING INSTRUCTIONS

Model: 30029



TO OPERATE THE CLOCK:

When the clock is plugged in an AC outlet, the display will blink on and off meaning the incorrect time is being displayed. You should always check the time when this is indicated. The clock will automatically indicate AM/PM, but you must be sure to correctly set the indicator for the time and alarm. When the PM indicator is on, "PM" will be displayed and when the AM indicator is on, nothing will be displayed. When the alarm indicator is displayed, then the alarm will sound at the set time.

TO SET THE TIME:

Slide the TIME SET switch to T. Set. Press and hold the HOUR SET button to your desired hour. Be careful to set the AM/PM correctly, when PM time is set, "PM" will appear on the display. Press and hold MINUTE SET button to your desired minute.

TO TURN THE ASCENDING ALARM ON AND OFF:

Slide the ALARM ON/OFF SWITCH to "AL. ON" Position. A bell icon will be visible on the display. When the alarm is activated, the alarm will sound at the selected alarm time. Slide the ALARM ON/OFF Switch to the "AL. OFF" position to turn the alarm off.

TO USE THE SNOOZE FEATURE

When the alarm is sounding, press the SNOOZE button. The bell icon will blink on and off indicating the snooze mode is activated. The alarm will sound again after 8 minutes.

BATTERY BACKUP

This clock has an optional battery backup feature, designed to retain the time and alarm setting in the event of a power failure. To use the battery backup, insert one 1.5v "AA" battery into the battery compartment noting the correct polarity. Note that the battery can be installed without unplugging the clock. If the power fails, the battery backup will automatically continue running the clock maintaining the time and alarm settings. However, the display will disappear. When the power is restored, the display will reappear. The battery will maintain timekeeping and the alarm setting for approximately 8 hours during the power failure or interruption. If using the battery backup feature. It is recommended to change the battery annually.

MAINTENANCE AND STORAGE:

Store the clock without the battery and use the original package when not in use. A soft cloth or a paper towel should be used to clean your clock. Do not use any corrosive cleanser or chemical solutions on the clock. Keep the clock clean and dry to avoid any problems.

Two Year Warranty (U.S.A.)

Equity products are warranted for two years from the date of consumer purchase against defects in material and workmanship. During this period such defects will be repaired, or the product will be replaced at Equity's option. This warranty does not cover damage caused by misuse or negligence. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

If your product is not working properly, please send:

- The Product
- a letter explaining the problem
- and \$5.00 for postage and handling to:

Equity Warranty Dept.**2817 Losey Blvd. S****La Crosse, WI 54601**

For Customer Support, visit:

www.equitybylacrosse.com/supportThe logo features the word "Equity" in a large, elegant, cursive script font. To its right is a small circle containing the letters "by", followed by the words "La Crosse" in a clean, sans-serif font. A trademark symbol (TM) is positioned at the end of "La Crosse".**2 Year Limited Warranty**

La Crosse, WI 54601

www.equitybylacrosse.com