

6.2x22cm

TO USE THE SNOOZE

When the alarm sounds, simply press the SNOOZE/LIGHT (6) button. The alarm will stop and will sound again in approximately 8 minutes.

You can continue to use the SNOOZE repeatedly and the alarm will sound 8 minutes after each time the SNOOZE/LIGHT (6) button is pressed.

LIGHT

If you wish to view the current time during the night or in a darkened room, simply press the SNOOZE/LIGHT (6) button momentarily. A light will come on in the display area allowing you to see the current time. NOTE: Frequent use of the LIGHT feature will shorten the life of the battery.

BATTERY REPLACEMENT

The "AA" battery which powers your quartz clock should last approximately one year. If the clock steadily loses time, or if the alarm sounds weak or abnormal, the battery should be replaced. Your quartz clock contains highly precise electronic circuits. To maintain its high accuracy, do not subject it to shock, extreme temperatures, or direct sunlight. Operating temperatures range: 14 °F to 122 °F (-10 °C to 50 °C)

MAINTENANCE AND STORAGE:

store the clock without the battery and use the original package when not in use. a soft cloth or a paper towel should be used to clean your clock. do not use any corrosive cleanser or chemical solutions on the clock. keep the clock clean and dry to avoid any problems.

TWO YEAR WARRANTY (U.S.A.)

Equity products are warranted for two years from the date of consumer purchase against defects in material and workmanship. During this period such defects will be repaired, or the product will be replaced at Equity's option. This warranty does not cover damage caused by misuse or negligence. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

If your product is not working properly, please send:

- the product
- a letter explaining the problem
- and \$5.00 for postage and handling to:

Equity by La Crosse
Warranty Department
2830 26th St. S.
La Crosse, WI 54601

Remove the battery from the clock if you do not intend to use for an extended period of time. Remove used battery promptly.

Note: For best performance, batteries should be replaced at least once a year to maintain the best running accuracy. Ensure that the batteries used are new and the correct size.

♻ Please help in preservation of the environment and return used batteries to an authorized depot.

www.equitybylacrosse.com/support

Equity® DIGITAL CLOCK MAINTENANCE & STORAGE INSTRUCTIONS MODEL 31003



BATTERY INSTALLATION

The battery compartment is located on the back of the clock. Slide the battery cover away from the clock case. Remove the battery cover and insert one AA battery according to the polarity indication inside the battery compartment. Replace battery cover. (Battery not included)

TO SET THE TIME

Press down and hold the TIME SET (3) button. Depress the HOUR (5) button as many times as necessary until the correct hour is reached. (Please note: if the Hour desired is of PM time, "PM" will display in the lower left corner of the display). Next, press the MIN (4) button until the desired TIME is reached. Release the TIME SET (3) button.

TO SET THE ALARM TIME

Press down and hold the ALARM SET (2) button. Depress the HOUR (5) button as many times as necessary until the desired hour is reached. (Please note: if the Hour desired is of PM time, "PM" will display in the lower left corner of the display). Next, press the MIN (4) button until the desired ALARM TIME is reached. Release the ALARM SET (2) button.

TO TURN THE ALARM ON

Slide the ALARM (1) switch to the "ON" position. An "ALARM ON" indicator will appear in the upper left hand corner of the display. The alarm will sound at the desired time.

TO STOP THE ALARM

When the alarm sounds, you can turn it OFF by sliding the ALARM (1) Switch to the "ALARM OFF" position. If you do not turn the alarm off, it will sound for 1 minute. then turn itself off and reset automatically for the next day.

Made in China

Printed in China

www.equitybylacrosse.com/support