

Instructions for Assembly

- Remove included metal mounting stake from rain gauge tube.
- Insert metal mounting stake into hole at bottom of rain gauge.
- Place the rain gauge in an open area away from roof lines or water runoff. For accurate measurements, do not place near water runoff from a roof line or any other structure. Use in a garden to measure rainfall for watering plants or flowers.
- Note: The yellow O-ring floating marker should not be removed from the rain gauge tube. The purpose of the O-ring is to easily view rain fall levels.