

**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

**Caution: To prevent electrical shock do not use this (polarized) plug with an extension cord, receptacle, or other outlet unless the blades can be fully inserted to prevent blade exposure.**



#### Two Year Limited Warranty (U.S.A.)

Equity products are warranted for two years from the date of consumer purchase against defects in material and workmanship. During this period such defects will be repaired, or the product will be replaced at Equity's option, without charge. This warranty does not cover damage caused by misuse or negligence. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

#### If your product is not working properly, please send:

- the product
- a letter explaining the problem
- and \$5.00 for postage and handling to :

Equity by La Crosse  
Warranty Department  
2830 26th St. S.  
La Crosse, WI 54601


Made in China

Printed in China

[www.equitybylacrosse.com/support](http://www.equitybylacrosse.com/support)

*Equity*<sup>®</sup>

## 0.9" LED ALARM CLOCK WITH USB CHARGING PORT Model #30024, 30025

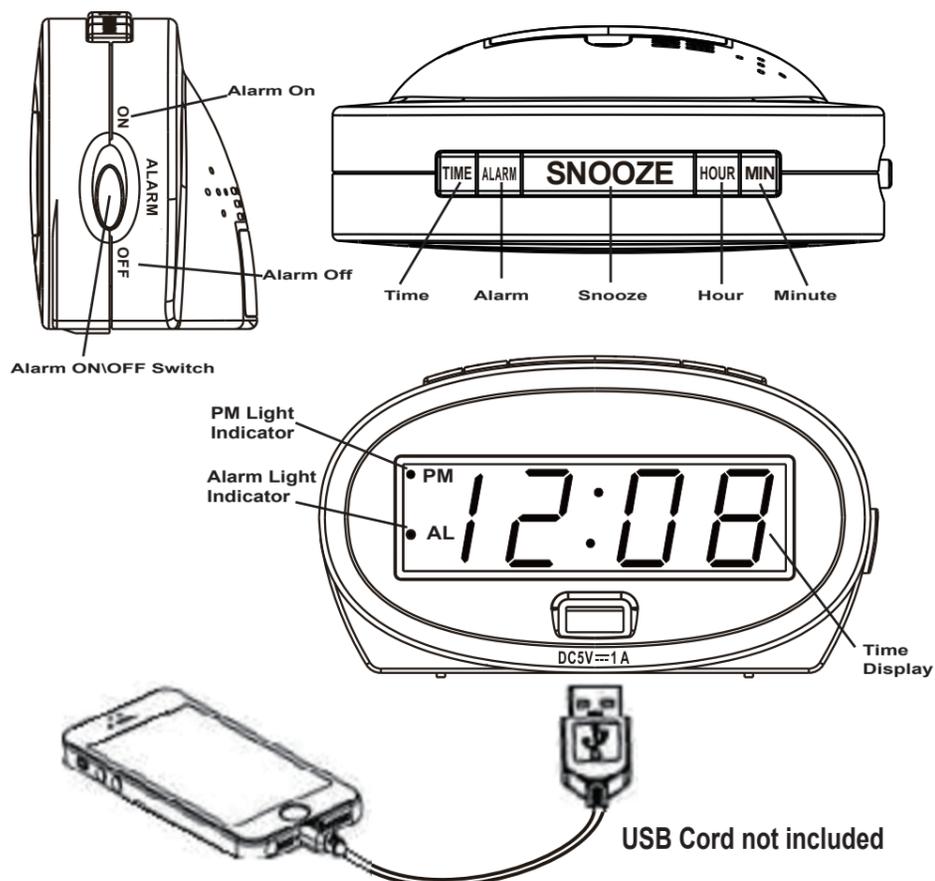

The socket-outlet shall be installed near the equipment and shall be easily accessible.

La prise de courant doit être installée près de l'équipement et doit être facilement accessible.

Please read this before operating your clock

[www.equitybylacrosse.com/support](http://www.equitybylacrosse.com/support)

#### Power Supply

When the AC Adaptor is plugged in the display will go to 12:00 am.

#### P.M. indicator

A dot appears in the upper left hand corner of the display indicating that the time shown is P.M.

#### Alarm ON indicator

A dot appears in the lower left hand corner of the display indicating that the alarm has been activated.

#### Time setting

- Hold down the TIME button and press the HOUR button continuously to forward the hours to your desired hour setting.
- Hold down the TIME button and press the MINUTE button continuously to forward the minutes to your desired minute setting.

Remember to set the correct AM or PM time. The PM light indicator will light up in PM time.

#### USB charging port (USB Cord not included)

Charge a cell phone, mp3 player, camera or other portable device, or power any USB powered device with the USB charging port. Use the USB cable that came with the portable device to connect to the USB charging port. The USB port will provide power of up to 5V 1 AMP.

For additional support regarding the USB charging feature please visit:

[www.equitybylacrosse.com/contact-customer-support](http://www.equitybylacrosse.com/contact-customer-support)

#### Alarm time setting

- Hold the ALARM button down and press the HOUR button continuously to forward the time to your desired hour setting.
- Hold the ALARM button down and press the MINUTE button continuously to forward the time to your desired minute setting.

Remember to set the correct AM or PM time. Move the ALARM ON/OFF switch to the ON position to activate the alarm. The ALARM light indicator will light up when the Alarm is activated.

#### Alarm Operation and Snooze

Slide the ON/OFF switch to the ON position. When the alarm sounds, press the snooze bar to get an extra 9 minutes of sleep.

#### Battery back up

In the event of power failure, the unit will automatically switch to a battery stand-by circuit when batteries are installed. Open the BATTERY COMPARTMENT on the bottom of the unit and install one "9V" Alkaline battery according to the polarity markings. Under the battery operation, the clock will keep the time running and the alarm will sound at the desired time. The clock display will not light up to save battery power. If you have a long power outage, you may need a slight adjustment to the clock time after the AC power is restored.

#### Battery Instruction

1. Always purchase the correct size and grade of battery most suitable for the intended use.
2. Clean the battery contacts and also those of the device prior to battery installation.
3. Ensure the batteries are installed correctly with regard to polarity (+ and -).
4. Remove the batteries from equipment which is not to be used for an extended period of time.
5. Remove used batteries promptly.

[www.equitybylacrosse.com/support](http://www.equitybylacrosse.com/support)

Please help in the preservation of the environment and return used batteries to an authorized depot.

Remove the batteries from the clock if you do not intend to use for an extended period of time.

1. Read Instructions-All the safety and operating instructions should be read before the clock is operated.
2. Retain instructions - The safety and operating instructions should be retained for future reference.
3. Warning - All warnings on the clock and in the operating should be retained for future reference.
4. Water and Moisture - The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, near a swimming pool, and /or the like.
5. Ventilation - The clock should be situated so that its location or position does not interfere with its proper ventilation. For example, the clock should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings, or, place in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
6. Heat - The clock should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
7. Power Sources - The clocks should be connected to a power supply only of the type described in the operating instructions or as marked on the clock.
8. Grounding or Polarization - Precautions should be taken so that the grounding or polarization means are not defective.
9. Power-Cord Protection - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the clock.
10. Cleaning - The clock should be cleaned only as recommended by the manufacturer.
11. Object and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
12. Damage Requiring Service - The appliance should be serviced by qualified service personnel in any of the following situations:
  - The power -supply cord or the plug has been damaged.
  - Objects have fallen, or liquid has been spilled into the clock.
  - The clock has been exposed to rain.
  - The clock does not appear to operate normally or exhibits a marked change in performance.
  - The clock has been dropped, or the enclosure damaged.
13. Servicing - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

**Warning:** Do not make any repairs to the clock.  
Changes or modifications to this unit may invalidate the warranty.

[www.equitybylacrosse.com/support](http://www.equitybylacrosse.com/support)