

*Equity*<sup>®</sup>

# EQUITY LED ALARM

## INSTRUCTION SHEET

### Model# 30040



### CAUTION PRECAUCIÓN

RISK OF ELECTRIC SHOCK  
DO NOT OPEN  
RISQUE DE CHOC ELECTRIQUE  
NE PAS OUVRIR

RIESGO DE DESCARGA ELECTRICA  
NO ABRIR



**CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE, OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.**

**ATTENTION: POUR PRÉVENIR LES CHOC ÉLECTRIQUES NE PAS UTILISER CETTE FICHE POLARISÉE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT, OU UNE AUTRE SORTIE DE COURANT SAUF SI LES LAMES PEUVENT ÊTRE INSÉRÉES À FOND SANS EN LAISSER AUCUNE PARTIE À DÉCOUVERT.**

**PRECAUCION: A EFECTOS DE PREVENIR UNA DESCARGA ELECTRICA NO UTILICE ESTA FICHA (POLARIZADA) CON UN CABLE DE EXTENSION, RECEPTACULO U OTRA SALIDA A MENOS QUE LAS HOJAS PUEDAN SER COMPLETAMENTE INSERTADAS PARA PREVENIR QUE PARTE DE LAS MISMAS QUEDEN EXPUESTAS.**



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user of the presence of uninsulated "dangerous voltage" within the product's enclosure; that may be of sufficient magnitude to constitute a risk of electric shock to person.

Le dessin de foudre avec un symbole fêché placé dans un triangle équilatéral est destiné à avertir l'utilisateur de la présence d'une tension dangereuse non isolée dans le boîtier de l'appareil et dont la magnitude peut être suffisante pour représenter un risque de choc électrique pour tout individu.

El símbolo de rayo con cabeza de flecha dentro de un triángulo equilátero, tiene la finalidad de alertar al usuario sobre la presencia de "voltaje peligroso" sin aislamiento, dentro del ámbito del producto; ésta puede ser de suficiente magnitud como para constituir un riesgo de descarga eléctrica a una persona.



The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Le point d'exclamation placé dans un triangle équilatéral est destiné à avertir l'utilisateur sur la présence d'importantes d'instructions d'utilisation et d'entretien dans la documentation fournie avec l'appareil.

El signo de exclamación dentro de un triángulo equilátero tiene la finalidad de alertar al usuario sobre la presencia de importantes instrucciones de funcionamiento y mantenimiento (servicio) en la literatura que acompaña al artefacto.

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

**AVERTISSEMENT: POUR ÉVITER TOUT RISQUE D'INCENDIE OU DE CHOC ÉLECTRIQUE, NE PAS EXPOSER CET APPAREIL À LA PLUIE NI L'HUMIDITÉ.**

**ADVERTENCIA: A FIN DE PREVENIR PELIGRO DE INCENDIOS O DESCARGAS, NO EXPONGA ESTE ARTEFACTO A LA LLUVIA O A LA HUMEDAD.**


## CONTROL LOCATIONS

1. HOUR BUTTON
2. MINUTE BUTTON
3. TIME SET BUTTON
4. ALARM SET BUTTON
5. ALARM ON / OFF SWITCH
6. SNOOZE BUTTON

## POWER SUPPLY

Your clock is designed to operate on alternating 120 Volts 60 Hz power supply.

The clock starts running when the plug is connected into a power outlet.

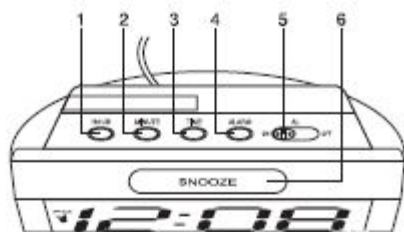

## TIME SETTING

- Press and hold the TIME SET button (3) and press the HOUR button (1) to your desired hour. Be careful to set the time to AM or PM correctly. When PM time is set, a "PM" indicator will appear on display.
- Hold the TIME SET button (3) again, press the MINUTE button (2) to your desired minute.

## ALARM TIME SETTING

- Press and hold the ALARM SET button (4) and press the HOUR button (1) to your desired hour. Be careful to set the time to AM or PM correctly. When PM time is set, a "PM" indicator will appear on display.
- Hold the ALARM SET button (4) again, press the MINUTE button (2) to your desired minute.

## SNOOZE REPEAT ALARM OPERATION

Move the ALARM ON / OFF switch (5) to ON position. A bell icon "Z, 🛎" will appear on the display when the alarm is activated. The alarm will sound for 8-9 minute at the pre-set time. When the alarm is sounding, press the SNOOZE button (6). The alarm will stop and sound again after 8 minute. Move the ALARM ON / OFF switch (5) to OFF position to turn the alarm off.

## OPTIONAL BATTERY BACK UP

- This clock has an optional battery back up feature, designed to retain the time and alarm settings in the event of a power failure.
- To use the battery back up, insert one 1.5V "AA" battery into the battery compartment on the back of the clock. If the power fails, the battery back up will automatically continue running the clock and maintain the time and alarm settings.
- To maintain the battery back up feature, it is recommended to change the battery annually.

### Two Year Warranty:

Equity products are warranted for two years from the date of consumer purchase against defects on material and workmanship. During this period such defects will be repaired, or the product will be replaced at Equity's option, without charge. This warranty does not cover damage caused by misuse or negligence. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF TWO YEARS FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

If your clock is not working, send it with a letter explaining the problem and \$5.00 for postage and handling to:

Equity by La Crosse.

Warranty Department.

2830 26th St. S.

La Crosse, WI 54601

Made In China

[www.equitybylacrosse.com/support](http://www.equitybylacrosse.com/support)



ETL LISTED

Printed In China