



LCD DIGITAL CLOCK WITH NIGHT VISION

INSTRUCTION SHEET

Model# 30041

FEATURES

1. Large display
2. Bright Green Backlight on Demand
3. Display Day, Date and Alarm Time
4. Smartlite-Automatically illuminates display in a dark environment
5. Snooze repeats every 5 minutes
6. PM indicators
7. Requires three "AA" batteries (not included)

BATTERIES

This clock operates on three "AA" batteries (not included). Remove the Battery Door (H) and insert three new "AA" batteries in the direction of the polarity symbols. Please make sure the batteries are new and inserted correctly.

If the clock does not operate, or steadily loses time, or if the alarm sounds weak, the battery is low and should be replaced.

SETTING THE TIME

Slide the "MODE" switch (E) to the "TIME" position. Press "HOUR" button (B) to set the hours. Press the "MINUTE" button (C) to set the minutes. Be sure to correctly set the time in AM or PM mode. Slide the "MODE" switch (E) to the "LOCK" position after setting the time.

SETTING THE DATE

Slide the "MODE" switch (E) to the "DATE" position. Press "YEAR" button (D) to set the year. Press "MONTH" button (B) to set the month. Press the "DATE" button (C) to set the date. Slide the "MODE" switch (E) to the "LOCK" position after setting the date.

SETTING THE ALARM

Slide the "MODE" switch (E) to the "ALARM" position. Press "HOUR" button (B) to set the alarm hours. Press the "MINUTE" button (C) to set the alarm minutes. Be sure to correctly set the alarm in AM or PM mode. Slide the "MODE" switch (E) to the "LOCK" position after setting the alarm.

ACTIVATING THE ALARM AND SNOOZE

To activate the alarm, slide the "ALARM ON/OFF" switch (F) to "ON" position. The alarm symbol (🔔, Zz) will appear on the display. At the pre-set time, the alarm will sound. After the alarm is activated, press the "SNOOZE/LIGHT" button (A), the alarm will shut off for five (5) minutes and the snooze icon (Zz) flashes, then automatically reactivate. This snooze function can be repeated again and again. You may also shut off the alarm completely, by sliding "ALARM ON/OFF" switch (F) to the "OFF" position.

12 HOUR / 24 HOUR FORMATS

Press the "12/24" button (D) to select either the 12 or 24 hour format.

COLOR BACKLIGHT

The display can be illuminated at any time by pressing the "SNOOZE/LIGHT" (A), and will stay illuminated for five (5) seconds, then automatically fade. The display will also illuminate if you press the "SNOOZE/LIGHT" (C) at the time the alarm sounds.

Night Light

The display automatically illuminates in a dark environment. To activate the Smartlite, slide the "SENSOR" switch (G) on the bottom of the case to the "ON" position. To deactivate the Smartlite, slide the "SENSOR" switch (G) to the "OFF" position.

Two Year Warranty:

Equity products are warranted for two years from the date of consumer purchase against defects on material and workmanship. During this period such defects will be repaired, or the product will be replaced at Equity's option, without charge. This warranty does not cover damage caused by misuse or negligence.

ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF TWO YEARS FROM THE DATE OF PURCHASE.

Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

If your clock is not working, send it with a letter explaining the problem and \$5.00 for postage and handling to:

Equity by La Crosse.


Warranty Department.

2830 26th St. S.

La Crosse, WI 54601

Made in China

www.equitybylacrosse.com/support

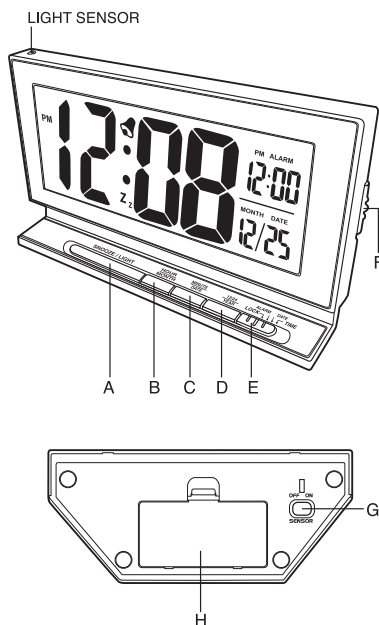

Printed in China