

**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

**Caution: To prevent electrical shock do not use this (polarized). plug with an extension cord, receptacle, or other outlet unless the blades can be fully inserted to prevent blade exposure.**

**ATTENTION : POUR PRÉVENIR LES CHOCS ÉLECTRIQUES NE PAS UTILISER CETTE FICHE POLARISÉE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT, OU UNE AUTRE SORTIE DE COURANT SAUF SI LES LAMES PEUVENT ÊTRE INSÉRÉES À FOND SANS EN LAISSER AUCUNE PARTIE À DÉCOUVERT.**



#### Two Year Limited Warranty (U.S.A.)

Equity products are warranted for two years from the date of consumer purchase against defects in material and workmanship. During this period such defects will be repaired, or the product will be replaced at Equity's option, without charge. This warranty does not cover damage caused by misuse or negligence. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty give you specific legal rights and you may also have other rights which vary from State to State.

#### If your product is not working properly, please send:

- the product
- a letter explaining the problem
- and \$5.00 for postage and handling to :

Equity by La Crosse  
Warranty Department  
2830 26th St. S.  
La Crosse, WI 54601


Made in China

Printed in China

[www.equitybylacrosse.com/support](http://www.equitybylacrosse.com/support)

Equity®

## 0.9" RED LED DUAL ALARM CLOCK Model 30229

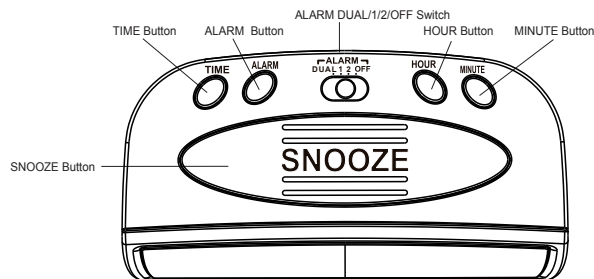

#### Features

- 0.9" LED display
- Dual Alarm selection
- Ascending Alarm
- Repeat 9 Minute snooze
- Requires one 9V battery for back-up
- AC 120V, 60 Hz, ETL approved

#### Power Supply

Please read this before operating your clock

- \* Begin by plugging in the power cord into a standard household outlet. The display will flash indicating the time is ready to be set.

#### Setting The Time

- \* Hold down the **TIME** button and then press **HOUR** button to set the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- \* Hold down the **TIME** button and then press **MINUTE** button to set the correct minute.
- \* Release the **TIME** button when the correct time is shown on display.

[www.equitybylacrosse.com/support](http://www.equitybylacrosse.com/support)

#### Setting The First Alarm

- \* Slide the **ALARM DUAL 1/2/OFF** switch to the **Alarm 1** position to set the first alarm.
- \* Hold down the **ALARM** button and then press the **HOUR** button to set the correct hour. The PM indicator light will light when the hour is advanced into the PM time.
- \* Hold down the **ALARM** button and then press the **MINUTE** button to set the correct minute.
- \* Release the **ALARM** button when the correct alarm time is shown on the display.

#### Setting The Second Alarm

- \* Slide the **ALARM DUAL 1/2/OFF** switch to the **Alarm 2** position to set the second alarm.
- \* Hold down the **ALARM** button and then press the **HOUR** button to set the correct hour. The PM indicator light will light when the hour is advanced into the PM time.
- \* Hold down the **ALARM** button and then press the **MINUTE** button to set the correct minute.
- \* Release the **ALARM** button when the correct alarm time is shown on the display.

#### Using The Alarm 1

- \* Slide the **ALARM DUAL 1/2/OFF** switch to the **ALARM 1** position to choose first alarm. The alarm indicator light for AL 1 will appear on upper left side of display.
- \* Slide the **ALARM DUAL 1/2/OFF** switch to **OFF** position to deactivate the alarm.

#### Using The Alarm 2

- \* Slide the **ALARM DUAL 1/2/OFF** switch the **ALARM 2** position to choose second alarm. The alarm indicator light for AL 2 will appear on the left side of display.
- \* Slide the **ALARM DUAL 1/2/OFF** switch to **OFF** position to deactivate the alarm.

#### Using The Dual Alarm

- \* Set **AL1** and **AL2**. Once both Alarms are set you can use the **DUAL** setting.
- \* Slide the **ALARM DUAL 1/2/OFF** switch to the **Dual** position to choose both alarm. The alarm will sound at the preset alarm times respectively. The alarm indicator light for **AL1 & AL2** both will appear on the left side of display.
- \* Slide the **ALARM DUAL 1/2/OFF** switch to the **OFF** position to deactivate the alarm.

#### Using The Snooze

- \* Press the **SNOOZE** button when the alarm sounds will stop the alarm and the alarm will sound again in nine minutes.
- \* The snooze function can be repeated many times.

#### Battery Backup

- \* Insert one "9V" battery into the battery compartment at the back of the clock. The battery will keep the alarm and time settings until the power is restored. The LED display will not light-up but the alarm will sound at the preset alarm time. If there is no battery installed but the power is interrupted, once power is restored, the display will reset at 12:00 and the time and alarm need to be set again.

#### Battery Warning

Clean the battery contacts and also those of the device prior to battery installation. Follow the polarity (+) and (-) when inserting battery.

[www.equitybylacrosse.com/support](http://www.equitybylacrosse.com/support)

## Safety Instructions

1. Read Instructions-All the safety and operating instructions should be read before the appliance is operated.
2. Retain Instructions - The safety and operating instructions should be retained for future reference.
3. Water and Moisture - The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, and the like.
4. Ventilation - The appliance should be situated so that its location or position does not interfere with its proper ventilation, For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings, or, place in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
5. Heat - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
6. Power Sources-The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
7. Grounding or Polarization-The precaution should be taken so that the grounding or polarization means of an appliance is not defeated.
8. Power-Cord Protection - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
9. Cleaning - The appliance should be cleaned only as recommended by the manufacturer.
10. Object and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
11. Damage Requiring Service - The appliance should be serviced by qualified service personnel when:
  - A. The power -supply cord or the plug has been damaged; or
  - B. Objects have fallen, or liquid has been spilled into the appliance; or
  - C. The appliance has been exposed to rain; or
  - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
  - E. The appliance has been dropped, or the enclosure damaged.
12. Servicing - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service. personnel.



Please help in preservation of the environment and return used batteries to an authorized depot. Remove the battery from the clock if you do not intend to use for an extended period of time.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

[www.equitybylacrosse.com/support](http://www.equitybylacrosse.com/support)