




Jumbo LED Display Alarm Clock

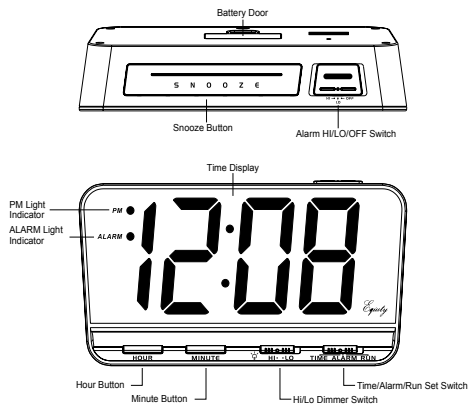

Model: 30401 & 30402
DC: 020518

POWER UP

1. Insert the 120 volt power cord into the outlet, then into your clock.
Optional: Insert one 9 volt battery for backup.
2. 12:00 will flash as an indication to set the time and/or alarm.

SETTINGS

1. Slide the TIME/ALARM/RUN set switch to the **TIME** position.
2. Press HOUR button to set the correct hour. The PM indicator will light when in PM time.
3. Press MINUTE button to set the correct minute.
4. Slide the TIME/ALARM/RUN set switch to **RUN** after set your time.

CLOCK DIMMER SWITCH

- Brighter:** Slide the HI/LO display dimmer switch to HI position.
- Normal:** Slide the HI/LO display dimmer switch to LO position.

TIME ALARM

1. Slide the TIME/ALARM/RUN set switch to the **ALARM** position.
2. Press HOUR button to set the correct hour. The PM indicator will light when in PM time.
3. Press MINUTE button to set the correct minute.
4. Slide the TIME/ALARM/RUN set switch to **RUN** after set your time.

ALARM VOLUME


- Loud:** Slide the HI/LO/OFF alarm switch to the **HI** position. The alarm indicator will show.
- Regular:** Slide the HI/LO/OFF alarm switch to the **LO** position for choose regular alarm sound.
- OFF:** Slide the HI/LO/OFF alarm switch to the **OFF** position to turn the alarm OFF. The alarm indicator will disappear.

SNOOZE

When alarm sounds, press the SNOOZE button to silence alarm for 9 minutes. Snooze function will repeat until alarm BUTTON is turned to OFF setting.

BATTERY BACKUP

- Insert one “9V” battery into the battery compartment at the back of the clock. The battery will keep the alarm and time settings until the power is restored.
- The LED display will not light-up but the alarm will sound at the preset alarm time.
- If there is no battery installed but the power is interrupted, the display will flash at 12:00 and the time and alarm need to be set again.

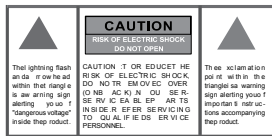

CARE & MAINTENANCE

- Always purchase the correct size and grade of battery most suitable for intended use.
- Clean the battery contacts and also those of your clock prior to battery installation.
- Ensure the battery is installed with correct polarity (+ and -).
- Remove battery from equipment when it is not used for an extended period of time.
- Promptly remove an expired battery.

POWER

Power: AC 120V, 60 Hz, ETL approved
Requires one 9V battery for back-up not included

WARRANTY AND SUPPORT

Equity provides a 2-year limited warranty on this product from the date of consumer purchase against defects for material and workmanship. During this period such defects will be repaired, or the product will be replaced at Equity's option, without charge. This warranty does not cover damage caused by misuse or negligence.

ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM DATE OF PURCHASE.

Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

If your product is not working properly, please send:
Your product
A letter explaining the problem and \$5.00 for postage and handling to:

Equity by La Crosse
Warranty Department
2830 26th St S.
La Crosse, WI 54601
www.lacrossetechnology.com/support

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Increase separation between equipment & receiver.
- Consult the dealer or an experienced radio/TV technician for help.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.