

 
**WIRELESS COLOR WEATHER STATION**

**TOP BUTTONS**



Color Animated Forecast with Tendency  
(All icons shown here)

**FRONT VIEW**

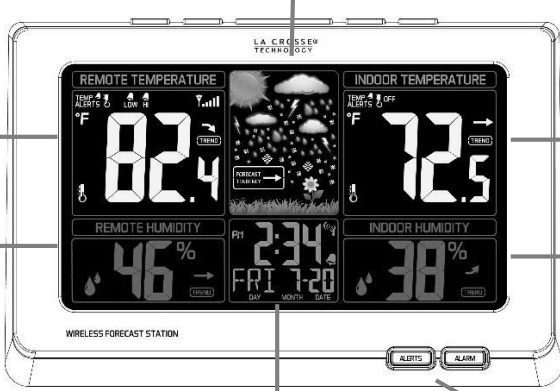

Remote Temperature with Trend & Temperature Alerts

Indoor Temperature with Trend & Temperature Alerts

Remote Humidity & Trends Button Press for Mold Risk Indicator When Using Remote Sensor Indoors


Indoor Humidity & Trend Button Press for Mold Risk Indicator for Weather Station

Time, Calendar + Alarm

**FRONT BUTTONS**



 **BACK VIEW**

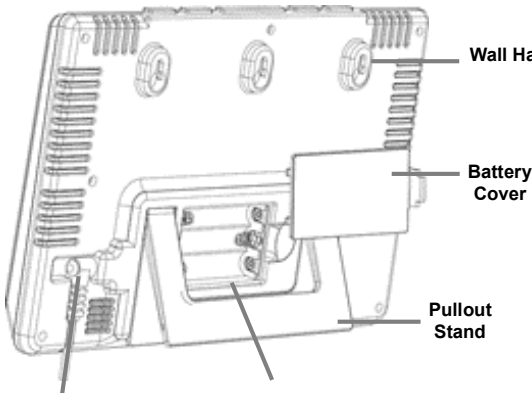

Wall Hanging Holes

 
Battery Cover

Pullout Stand

AC Power Jack  
GPU280500150WD00

Battery Compartment  
3 "AAA"

⊕ ⊖ ⊕ ⊖  
**DC 5.0V**

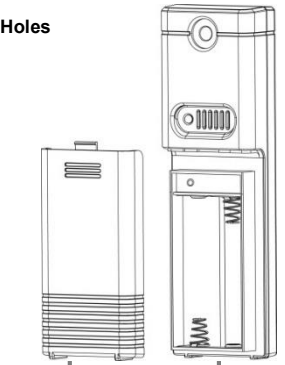

Sensor Battery Cover

Sensor Battery Compartment  
2 "AA"

SENSOR  
TX141TH-Bv2

## GET STARTED

**Step 1:** Insert the included 5-volt AC power adapter into the weather station and then into wall outlet.

 
**Step 2:** Insert 3 new "AAA" batteries (not included) into the weather station. Observe the correct polarity.

**Step 3:** Insert 2 new "AA" batteries (not included) into TX141TH-Bv2 sensor. Observe the correct polarity. The red LED will flash when transmitting.

**Restart:** If the remote temperature is not displayed after 3 minutes, unplug the AC adapter and remove batteries from the weather station & sensor and press any button 20 times. After 15 minutes return to **Step 1** above.

## SET TIME, DATE AND TEMPERATURE UNITS

1. Hold the **TIME SET** button to enter time set mode.
2. Press the ▼ or ▲ buttons to adjust the values. Hold for fast adjustment.
3. Press the **TIME SET** button to confirm adjustments and move to the next item.



### Settings order:

1. WWVB ON/OFF
2. Time Zone
3. Daylight Saving Indicator ON/OFF
4. 12/24 Hour Time Format
5. Hour
6. Minutes
7. Year
8. Month
9. Date
10. Fahrenheit/Celsius

TIME ZONE	
AST	Atlantic
EST	Eastern
CST	Central
MST	Mountain
PST	Pacific
AKT	Alaska
HAT	Hawaiian

Press the **TIME SET** button to exit, or wait 20 seconds without pressing buttons to return to the normal time display.

## SET TEMPERATURE ALERTS

1. Hold the **ALERTS** button until the station beeps.
2. The temperature alert value will blink in set mode.
3. Press the ▼ or ▲ buttons to adjust the temperature alert value.



4. Press the **ALERTS** button to confirm. Next, arm the temperature alerts (see below)

### The temperature alert order:

1. Remote High, 2. Remote Low, 3. Indoor High, 4. Indoor Low

Press the ALERTS button to exit, or wait 20 seconds without pressing buttons to return to normal time display

## ARMS/DISARMS TEMPERATURE ALERTS

Press & release the **ALERTS** button to toggle between the alerts Remote HI / Remote LOW / Indoor HI / Indoor LOW

- Press the ▲ button to arm the alert.
- Press the ▼ button to disarm the alert.
- ALERT BELL ICON appears when armed.



## ACTIVE TEMPERATURE ALERT

- Beeps once per minute with flashing alert bell icon.
- Press any button to stop the alert.

## Heat Index/Dew Point/Mold Risk

- Press the **HEAT/DEW** button once to view remote Heat Index.
- Press the **HEAT/DEW** button twice to view remote Dew Point.
- Press the **HEAT/DEW** button a third time to view indoor and remote Mold Risk.



## VIEW/RESET MIN/MAX VALUES




The station automatically resets minimum and maximum values daily at midnight (12:00 AM).

- Press the ▼ button to view minimum values.
- Hold the ▼ button to reset minimum values.
- Press the ▲ button to view maximum values.
- Hold the ▲ button to reset maximum values.



## TEMPERATURE/HUMIDITY TREND INDICATORS

The temperature (2°F/1°C) and humidity (3% RH) trend indicators update every 30 minutes or less.

<ul style="list-style-type: none"><li>• Temperature has risen in the past 3 hours.</li><li>• Humidity has risen in the past 3 hours.</li></ul>	<p>RISING </p>
<ul style="list-style-type: none"><li>• Temperature has not changed in the past 3 hours.</li><li>• Humidity has not changed in the past 3 hours.</li></ul>	<p>STEADY </p>
<ul style="list-style-type: none"><li>• Temperature has fallen in the past 3 hours.</li><li>• Humidity has fallen in the past 3 hours.</li></ul>	<p>FALLING </p>

## SET TIME ALARM

1. Hold the **ALARM** button to enter alarm time set mode.
2. Press the ▼ or ▲ buttons to adjust the Alarm Time.
3. Press the **ALARM** button to confirm adjustments and move to the next item.



**Alarm Time setting order:** 1. Hours, 2. Minutes

## ACTIVATE/DEACTIVATE TIME ALARM

- Press the **ALARM** button once to view alarm time.
- Press the **ALARM** button again to activate the alarm. Once activated the bell icon appears.
- Press the **ALARM** button again to deactivate the alarm. The bell icon will disappear.



Alarm  
Bell Icon

## SNOOZE (SILENCES ALARM TEMPORARILY)

- When alarm sounds, the **SNOOZE/LIGHT** button to silence the alarm for 10 minutes.
- The alarm icon will flash.
- In snooze mode, press any button, except SNOOZE/LIGHT to stop alarm for one day.

**Note:** The alarm is crescendo sound. The alarm will sound for 2 minutes and then shut off completely.

SNOOZE / LIGHT (HI-LOW-OFF)

## ADJUST BACKLIGHT

### When using A/C power:

SNOOZE / LIGHT (HI-LOW-OFF)

 
- Press the **HI/LOW/OFF** button to adjust the backlight:

### When using Battery power only:

- Press the **HI/LOW/OFF** button for 10 second backlight.

## Animated Forecast Icons

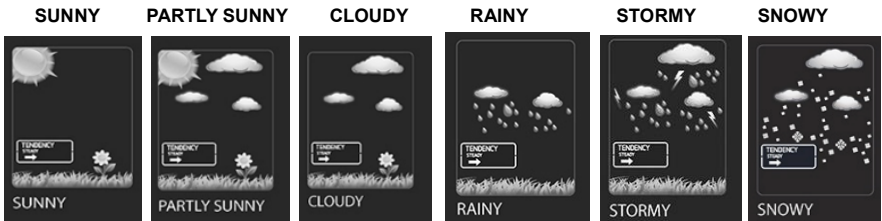


Animated forecast icons use changing atmospheric pressure to predict weather conditions for the next 12-hours with 70-75% accuracy.



## INTELLIGENT WEATHER FORECAST

This station learns. Please allow 3 to 4 weeks for barometric calibration. This will ensure an accurate personal forecast for your location.

## Forecast Trend Indicators

 <b>TENDENCY</b> <b>Rising Pressure</b> Weather is Expected to Improve	 <b>TENDENCY</b> <b>Steady Pressure</b> Weather is Expected to Stay the Same	 <b>TENDENCY</b> <b>Falling Pressure</b> Weather is Expected to Worsen
------------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------

## MANUAL WWVB RADIO-CONTROLLED TIME SEARCH

- Press the **TIME SET** button to start or stop a manual signal search. WWVB Icon will flash

### For information about WWVB visit:

[www.nist.gov/pml/div688/grp40/wwvb.cfm](http://www.nist.gov/pml/div688/grp40/wwvb.cfm)

TIME SET



WWVB  
Icon

## SEARCH FOR REMOTE SENSOR

- Hold the **HEAT/DEW** button to search for the remote sensor.
- The strength signal icon will animate until the sensor signal is received or for 3 minutes if no signal available.



## LOW BATTERY ICON

Low battery icon indicates low battery for station or sensor.

- If the icon is displayed in Remote Temperature section, replace batteries in the remote sensor.
- If the icon is displayed in Indoor Temperature section, replace batteries in the weather station



## POSITION REMOTE SENSOR

**Outdoor use:** Mount the Remote Sensor on a north-facing wall or in any well shaded area. Under an eave or deck rail is preferred.

**Indoor use:** Mount the Remote Sensor indoors to monitor high mold risk areas like in a crawl space or basement.

- The maximum wireless transmission range to the weather station is over 300 feet (91 meters) in open air.
- Walls or floors decrease the transmission range.
- Be sure the remote sensor is mounted vertically.

## WEATHER STATION CARE AND MAINTENANCE

- **Do not mix old and new batteries**
- **Do not mix Alkaline, Standard, Lithium or Rechargeable Batteries**
- Do not expose to extreme temperature, vibration or shock.
- Clean with a soft damp cloth. Do not use solvents or scouring agents.
- The product is not a toy. Keep it out of reach of children.
- The product is not to be used for medical purpose or for public information. It is intended for home use only.
- The specs of this product may change without prior notice.
- Improper use or unauthorized opening of housing voids warranty.
- If the product is not working properly, change the batteries and/or check the A/C cord connection.

## SPECIFICATIONS

### Indoor:

Temperature Range: +32°F to +122°F (0°C to 50°C)

Humidity Range: 1%-99% (RH)

Interval: About every 30 seconds

### Remote:

Temperature Range: -40°F to 140°F (-40°C to 60°C)

Alkaline Batteries: -20°F to 140°F (-28.8°C to 60°C)

Lithium Batteries: -40°F to 140°F (-40°C to 60°C)

**NOTE:** Temperatures below - 20°F (-28.8°C) require Lithium batteries in the remote sensor.

Humidity Range: 1%-99% (RH)

Distance: Over 300 ft. (91 meters)  
RF 433MHz (open air)

Interval: About every 50 seconds

### Power:

Forecast Station

Primary Power:  
AC#: GPU280500150WD00 5-volt AC power adapter (included)

Optional/Battery Backup Optional 3-AAA, IEC, LR3 batteries (not included)

TX141TH-Bv2 Sensor: 2-AA, IEC, LR6 batteries (not included)

### Battery Life:

Forecast Station  
Battery Backup: Battery life is over 24 months when using the AC adapter for primary power

TX141TH-Bv2 Sensor: Battery life is over 12 months when using reputable battery brands for both Alkaline and Lithium batteries

### Dimensions:

Forecast Station: 8.34" L x 1.03" W x 5.48" H  
(211.836 x 26.162 x 139.192mm)

TX141TH-Bv2 Sensor: 1.57" x 0.79" x 5.12"  
(40 x 20 x 130mm)

## WARRANTY AND SUPPORT INFORMATION

La Crosse Technology, Ltd. provides a 1-year limited time warranty (from date of purchase) on this product relating to manufacturing defects in materials & workmanship.

**View full warranty details online at:**

[www.lacrossetechnology.com/warranty\\_info.pdf](http://www.lacrossetechnology.com/warranty_info.pdf)

**For warranty work, technical support or other information contact:**

La Crosse Technology, Ltd  
2830 South 26<sup>th</sup> St  
La Crosse, WI 54601

**Contact Support:**

1-608-782-1610

**Online Product Support:**

[www.lacrossetechnology.com/support](http://www.lacrossetechnology.com/support)

**Product Registration:**

[www.lacrossetechnology.com/support/register](http://www.lacrossetechnology.com/support/register)

**Protected under U.S. Patents:**

5,978,738, 6,076,044, 6,597,990



## FCC STATEMENT

This Device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) the device must accept any interference received, including interference that may cause undesired operation. NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT

All rights reserved. This handbook must not be reproduced in any form, even in excerpts, or duplicated or processed using electronic, mechanical or chemical procedures without written permission of the publisher. This handbook may contain mistakes and printing errors. The information in this handbook is regularly checked and corrections made in the next issue. We accept no liability for technical mistakes or printing errors, or their consequences.