 
 
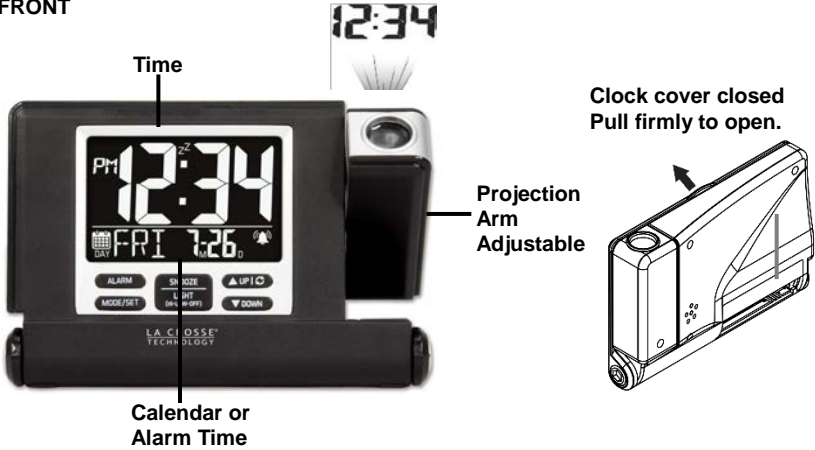 
 
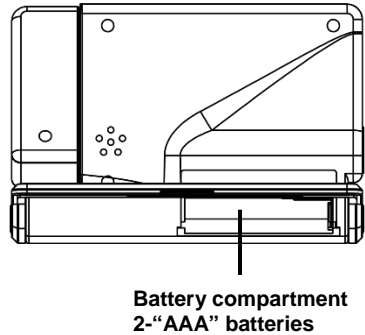 


Projection Time Alarm

FRONT

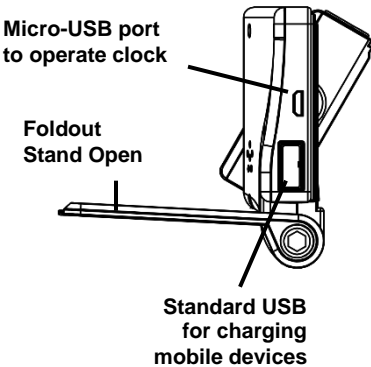

BUTTONS

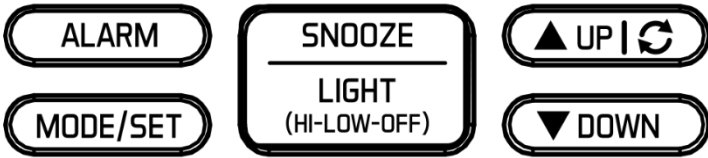

GET STARTED

Step 1: With the cover/stand closed, insert two AAA batteries (not included) into the back of projection alarm. Observe correct polarity.

Step 2: Looking at the top of the clock, firmly pull the cover/stand open to view the clock.

Step 3: Optional Micro-USB power cable (included) for constant, adjustable backlight and projection. Insert the Micro-USB end of the cable into the clock and the USB end into your

computer

USB port or a USB outlet.

Restart: Unplug the Micro-USB cable and remove batteries from the projection alarm, press a button 20 times. After 15 minutes, return to **Step 1** above.

SET TIME AND DATE

1. Hold the **MODE/SET** button five seconds, to enter time set mode.
2. Use the **▲UP** or **▼DOWN** buttons to adjust values. Press and hold those buttons for fast adjustment.
3. Press the **MODE/SET** button to confirm adjustments and move to the next item.

Time and Date setting order:

1. 12/24 Hour Time Format
2. Hour
3. Minutes
4. Year
5. Month
6. Date



Note: Day of the week sets automatically when year, month and date are set.

Press the **MODE/SET** button to exit, or wait 20 seconds without pressing buttons to return to the normal time display.

SET TIME ALARM

1. Press the **ALARM** button to view the alarm time.
2. In alarm mode, hold the **ALARM** button to enter alarm time set mode.
3. Use the **▲UP** or **▼DOWN** buttons to adjust values.



4. Press the **ALARM** button to confirm adjustments and move to the next item.



Alarm Time setting order:

1. Hours
2. Minutes

ACTIVATE/DEACTIVATE TIME ALARM

- Press the **ALARM** button once to view alarm time.
- Press the **ALARM** button again to activate the alarm. Bell icon appears.
- Press the **ALARM** button again to deactivate the alarm. The bell icon disappears.



SNOOZE (Silences alarm temporarily)

- Press the **SNOOZE/LIGHT** button to silence alarm for 10 minutes.
- **Zz** will show above the time.
- When in snooze mode, press **SNOOZE/LIGHT** to stop alarm for one day.

SNOOZE

LIGHT
(HI-LOW-OFF)

Note: The alarm is crescendo sound. The alarm will sound for 2 minutes and then shut off completely.

CALENDAR OR ALARM TIME DISPLAY

- Press the **MODE/SET** button to select Alarm Time or Calendar to be displayed.

MODE/SET

BACKLIGHT BRIGHTNESS-MICRO-USB POWER

Press and release the **SNOOZE/LIGHT** button to adjust the brightness of the backlight:

- ON Bright
- ON Dim
- OFF

SNOOZE

LIGHT
(HI-LOW-OFF)

Note: When the Micro-USB cable is NOT in use, the High/Low/Off features are not available.

When operating on battery power only, press the **SNOOZE/LIGHT** button for a 10 second backlight and projection. The projection will not stay on with battery power only.

PROJECTION (rotate, projection arm)

Battery Power: Press and release the **SNOOZE/LIGHT** button to show the projection for 10 seconds.

SNOOZE
LIGHT
(HI-LOW-OFF)

Micro-USB Cable: Projection is displayed constantly.

Note: Projection will not display constantly when operating on battery power.

Rotate Projection:



- Press the **▲UP** button to rotate the projection image 90 degrees.
- Press the **▲UP** button again to rotate another 90 degrees.
- Continue until the projected image is right side up.

Projection Arm: The projection arm will move forward or backward so you can project on the wall or ceiling.

USB CHARGE PORT

Charge your mobile device when the clock is plugged into a USB outlet with the included cable. You cannot charge mobile devices when operating the clock on battery power only.

Option 1:

- Use the included cable to connect the clock to a USB power outlet on your computer.
- Connect your mobile device's charging cable (not included) to the USB charging port.
- Charging times will vary.



Option 2:

- Use *your charge cable* to connect to an outlet and to the Micro-USB port on the clock.
- This will power the clock.
- Use the included cable to connect to the USB charge port and to your mobile device.

IMPORTANT: Charging ability will depend on the power output of *your charge cable*. There is no guarantee this configuration will charge your mobile device while powering the clock.

CARE AND MAINTENANCE

- Do not mix old and new batteries
- Do not mix Alkaline, Standard, Lithium or Rechargeable Batteries
- Always purchase the correct size and grade of battery most suitable for the intended use.
- Replace all batteries of a set at the same time.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly in regard to polarity (+ and -).
- Remove batteries from equipment when is not to be used for an extended period of time.
- Remove expired batteries promptly.

SPECIFICATIONS

Power:

Optional Micro-USB cable	Micro-USB to USB outlet(included)
--------------------------	-----------------------------------

Batteries	2-AAA, IEC, LR3 batteries (not included)
-----------	--

Battery Life:

Projection Alarm	Battery life is over 6 months with reputable battery brands.
------------------	--

Dimensions:

Projection Alarm Open:	4.5" L x 3" W x 3" H (114.3 x 76.2 x 76.2 mm)
------------------------	---

Closed	4.5"L x 0.94" W x 3"H (114.3 x 24 x 76.2mm)
--------	---

WARRANTY AND SUPPORT

La Crosse Technology, Ltd. provides a 1-year limited time warranty (from date of purchase) on this product relating to manufacturing defects in materials & workmanship.

View full warranty details online at:

www.lacrossetechnology.com/warranty_info.pdf

Before returning a product, please contact our friendly customer support with questions or visit our online help:

La Crosse Technology, Ltd
2830 South 26th St
La Crosse, WI 54601

Contact Support:

1-608-782-1610

Online Product Support:

www.lacrossetechnology.com/support

Product Registration:

www.lacrossetechnology.com/support/register



FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in compliance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences.

All trademarks and patents are recognized.