

616A-1908 FAQs

The links below will work in most PDF viewers and link to the topic area by clicking the link. We recommend Adobe Reader version 10 or greater available at: <http://get.adobe.com/reader>

CONTENTS

616A-1908 FAQs	1
Batteries	1
Clock Factory Restart	2
Projection Alarm Clock	2
How tall are the Time Numbers?.....	2
12-Hour or 24-Hour Time Format.....	2
Projection	2
Set Time Alarm	2
Activate/Deactivate Time Alarm.....	3
Snooze Alarm	3
Backlight (HI-LOW-OFF)	3
Time is incorrect	3
Manually Set Time/Calendar/Alarm: Program Menu	3
Display Date or Alarm time.....	4
USB Charging	4
Clock Has Missing Segments	4
Clock Is Dim	4
Clock Has Distorted Display.....	4

Batteries

- ✓ The Micro USB cord is the best power source for the projection alarm clock.
If you choose to use batteries:
- ✓ Use 2 AAA alkaline batteries.
- ✓ Half of all warranty issues can be resolved with fresh batteries of the appropriate voltage.
- ✓ Use batteries dated at least six years in advance of the current year. Batteries dated earlier than six years from now may still work, but may be unstable in performance.
- ✓ Alkaline batteries manufactured this year will have an expiration date 10 years in the future. Battery technology has improved and batteries will maintain voltage longer in storage. However, the environment the batteries reside in for the 10 years can deplete the power.

- ✓ Good name brand batteries make less noise, which reduces the chance of RF (radio frequency) interference from the battery compartment. A minimum voltage of 1.48V for each battery is necessary for proper performance.

Clock Factory Restart

1. Remove batteries and Micro USB cord from the clock.
2. Press one of the buttons on the clock at least 20 times to clear all memory. Verify that the clock is blank before proceeding.
3. Let the clock sit with batteries out for at least 10 minutes.
4. Insert fresh alkaline batteries in the clock.

Projection Alarm Clock

How tall are the Time Numbers?

- ✓ The time numbers are 0.86 inches tall.

12-Hour or 24-Hour Time Format

- ✓ Display the time in 12-hour or 24-hour format
- ✓ Default is 12-hour time.
- ✓ Use the [Program Menu](#) to switch time formats.

Projection

- ✓ **TIME** will project continually when operating with the Micro USB cord.
- ✓ **Battery Operation:** Press and release the SNOOZE/LIGHT button to show the projection for 3 seconds.
- ✓ **Note:** Projection will not display constantly when operating on battery power.
- ✓ **Projection Arm:** The projection arm will rotate 180 degrees to allow you to project on the wall or ceiling.
- ✓ **Projection Rotation:** Press and release the UP button to rotate the projected time in 90-degree increments.

Set Time Alarm

1. Hold then release the ALARM button to enter time set mode. The alarm hours will flash.
2. Press and release the ▲ or ▼ buttons to adjust the hour. Hold to adjust quickly.
3. Press and release the ALARM button to confirm and move to the minutes. The alarm minutes will flash.
4. Press and release the ▲ or ▼ buttons to adjust the minutes. Hold to adjust quickly.
5. Press and release the ALARM button to confirm and exit.

Activate/Deactivate Time Alarm

- ✓ Press the ALARM button once to view alarm time.
- ✓ Press the ALARM button again to activate the alarm.
- ✓ Bell icon appears.
- ✓ Press the ALARM button again to deactivate the alarm.
- ✓ The bell icon disappears.

Snooze Alarm

- ✓ Press the SNOOZE/LIGHT button to silence alarm for 10 minutes.
- ✓ Zz will show above the time.
- ✓ When in snooze mode, press SNOOZE/LIGHT to stop alarm for one day.
Note: The alarm is crescendo sound. The alarm will sound for 2 minutes and then shut off completely.

Backlight (HI-LOW-OFF)

- ✓ LCD Backlight has 3 stages, HI/LOW/OFF, press the SNOOZE/LIGHT button change the LCD brightness (HI, LOW,OFF)

Time is incorrect

- ✓ Time is manually set.
- ✓ Enter the program menu to adjust the time.

Manually Set Time/Calendar/Alarm: Program Menu

TIP: Press only one button at a time while setting the clock.

1. Hold the MODE/SET button for five seconds.
2. 12H will flash.
3. Press the ▲UP or ▼ DOWN buttons to select 24 hour time format.
4. Press the MODE/SET button to confirm adjustments and select the hours.
5. The hours will flash.
6. Press the ▲UP or ▼ DOWN buttons to set the hours.
7. Press the MODE/SET button to confirm adjustments and select minutes.
8. The minutes will flash.
9. Press the ▲UP or ▼ DOWN buttons to set the minutes.
10. Press the MODE/SET button to confirm adjustments and select the year.
11. The year will flash.
12. Press the ▲UP or ▼ DOWN buttons to set the year.
13. Press the MODE/SET button to confirm adjustments and set the month.
14. The month will flash.
15. Press the ▲UP or ▼ DOWN buttons to set the month.
16. Press the MODE/SET button to confirm adjustments and select date.
17. The date will flash.
18. Press the ▲UP or ▼ DOWN buttons to set the date
19. Press the MODE/SET button to confirm adjustments and exit.

Note: Day of the week sets automatically when year, month and date are set.

Display Date or Alarm time

Press the MODE/SET button to select Alarm Time or Calendar to be displayed.

USB Charging

Charge a smart phone, camera or other devices when the clock is plugged into a USB outlet with the Micro-USB cord.

Note: This is a power-output charging port. It does not supply power to the clock.

- ✓ Use the Micro-USB cord to connect the clock to a USB power outlet or your computer.
Note: You cannot charge mobile devices when operating the clock on battery power.
- ✓ Connect your mobile device's USB charging cable (not included) to the USB charging port.
- ✓ Charging times will vary.

Clock Has Missing Segments

- ✓ This is generally a power related issue.
- ✓ Batteries may be overpowered or underpowered. Remove batteries from clock.
- ✓ Press any button 20 times. Leave the clock unpowered for 1-2 hours.
- ✓ Insert fresh alkaline batteries with correct polarity.

Clock Is Dim

- ✓ Most clocks have a gray background. Place the clock at eye level. Is it still dim?
- ✓ Clocks that sit in the sunlight can develop a cloudy film over time.
- ✓ This is generally a power related issue. Check that the AC cord is plugged in correctly.
- ✓ Batteries may be overpowered or underpowered. Remove batteries and AC cord from clock.
- ✓ Press any button 20 times. Leave the clock unpowered for 1-2 hours.
- ✓ Install AC cord and/or fresh alkaline batteries with correct polarity.

Clock Has Distorted Display

- ✓ On a brand new clock check for thin plastic films of printed scratch guard that may be on the upper and lower screen of the clock. This thin piece of plastic has printed numbers for store displays.
- ✓ This film will be easy to peel off the LCD.
- ✓ With all power removed the clock should be blank.
- ✓ If numbers still appear, please check for scratch guard.