




Alarm Clock with USB Port Model 75904

Please read this before operating the clock

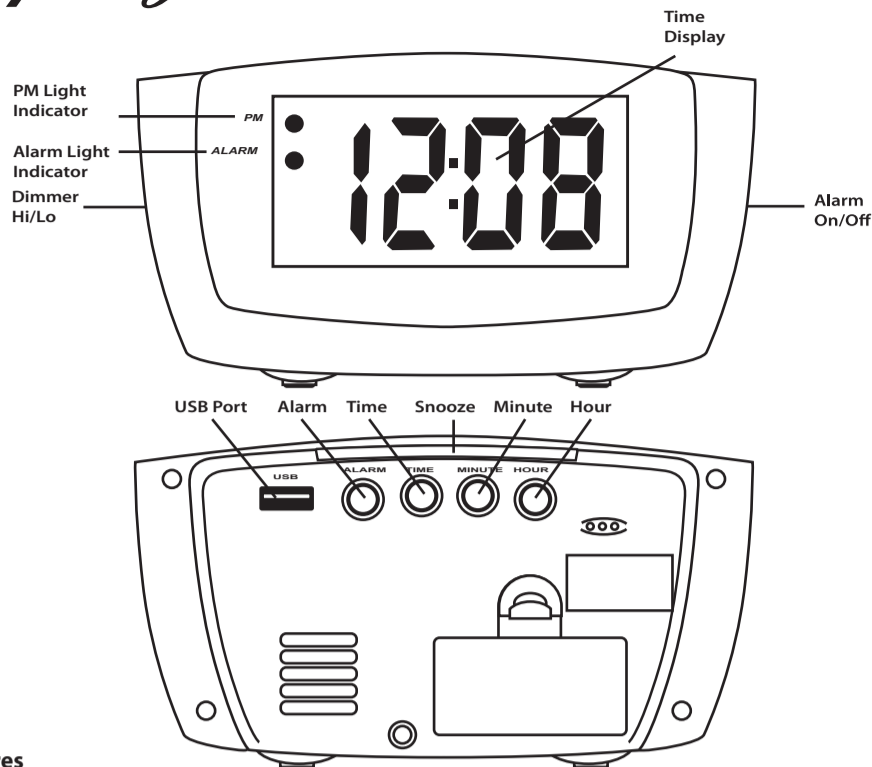

Features

- USB port for charging electronic devices
- Bright blue 1.8" LED display
- Hi/Lo display dimmer
- Loud alarm in ascending steps
- Repeat 9 minute snooze
- Requires one "9V" battery for back-up
- Power supply : AC 120V, 60 Hz adaptor, UL approved (supplied)

Power Supply

When the AC cord is plugged in the display will go to 12:00 am.

P.M. indicator

A dot appears in the upper left hand corner of the display indicating that the time shown is P.M.

Using The Display Dimmer Switch

- Slide the HI/LO display dimmer switch to HI position to choose brighter display.
- Slide the HI/LO display dimmer switch to LO position to choose normal display.

Alarm ON. indicator

A dot appears in the upper left hand corner of the display indicating that the alarm has been activated.

Time setting


- Hold down the TIME button and press the HOUR button continuously to forward the hours to your desired hour setting.
- Hold down the TIME button down and press the MINUTE button continuously to forward the minutes

www.equitybylacrosse.com/support

USB charging port

Charge a cell phone, mp3 player, camera or other portable device, or power any USB powered device with the USB charging port. Use the USB cable that came with the portable device to connect to the USB charging port. The USB port will provide power of up to 5V 1 AMP .

For additional support regarding the USB charging feature please visit:
www.equitybylacrosse.com/contact-customer-support

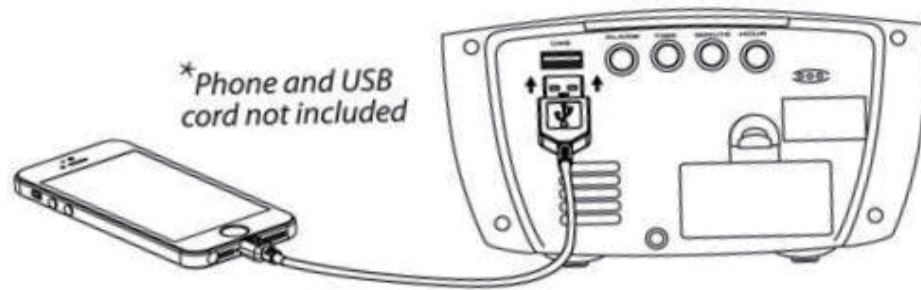

Alarm time setting

- Hold the ALARM button down and press the HOUR button continuously to forward the time to your desired hour setting.
- Hold the ALARM button down and press the MINUTE button continuously to forward the time to your desired minute setting.

Remember to set the correct AM or PM time. Move the ALARM ON/OFF switch to the ON position to activate the alarm. The ALARM light indicator will light up when the Alarm is activated.

Alarm Operation and Snooze

Slide the ON/OFF switch to the ON position. When the alarm sounds, press the snooze bar to get an extra 9 minutes of sleep.

Battery Backup

Insert one "9V" battery into the battery compartment at the backside of clock. If the AC power is interrupted the LED display will not light-up but the alarm will sound at the preset alarm time. If you choose not to install backup batteries, the display will go to 12:00 am when power is restored and the time and alarm will need to be set again.

Battery Warning

Clean the battery contacts and also those of the device prior to battery installation. Follow the polarity (+) and (-) to place battery. Incorrect battery placement will damage the clock movement and battery may leak. Exhausted battery is to be removed from the product. Remove battery from equipment which is not to be used for an extended period of time. Do not dispose of battery in fire. Battery may explode or leak.

FCC INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

www.equitybylacrosse.com/support

Safety Instructions

1. Read Instructions-All the safety and operating instructions should be read before the appliance is operated.
2. Retain Instructions - The safety and operating instructions should be retained for future reference.
3. Water and Moisture - The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, and the like.
4. Ventilation - The appliance should be situated so that its location or position does not interfere with its proper ventilation, For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings, or, place in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
5. Heat - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
6. Power Sources-The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
7. Grounding or Polarization-The precaution should be taken so that the grounding or polarization means of an appliance is not defeated.
8. Power-Cord Protection - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
9. Cleaning - The appliance should be cleaned only as recommended by the manufacturer.
10. Object and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
11. Damage Requiring Service - The appliance should be serviced by qualified service personnel when:
 - A. The power -supply cord or the plug has been damaged; or
 - B. Objects have fallen, or liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E. The appliance has been dropped, or the enclosure damaged.
12. Servicing - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

www.equitybylacrosse.com/support

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

Caution: To prevent electrical shock do not use this (polarized) plug with an extension cord, receptacle, or other outlet unless the blades can be fully inserted to prevent blade exposure.

Attention : pour prévenir les chocs électriques ne pas utiliser cette fiche polarisée avec un prolongateur, une prise de courant, ou une autre sortie de courant sauf si les lames peuvent être insérées à fond sans en laisser aucune partie à découvert.



The socket-outlet shall be installed near the equipment and shall be easily accessible.

La prise de courant doit être installée près de l'équipement et doit être facilement accessible.

Two Year Limited Warranty (U.S.A.)

Equity products are warranted for two years from the date of consumer purchase against defects in material and workmanship. During this period such defects will be repaired, or the product will be replaced at Equity's option, without charge. This warranty does not cover damage caused by misuse or negligence. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM DATE OF PURCHASE . Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

If your product is not working properly, please send:

- the product
- a letter explaining the problem
- and \$5.00 for postage and handling to :

Equity by La Crosse
Warranty Department
2830 26th St. S.
La Crosse, WI 54601

Made in China

Printed in China

www.equitybylacrosse.com/support