




Model: 75910
 Instruction Manual
 DC: 052214

0.9 Inch Bluetooth® Speaker Clock

CONTROL LOCATION

- 1 Bluetooth Button
- 2 Volume +Button
- 3 Volume -Button
- 4 Snooze Button
- 5 Time Button
- 6 Alarm1Button
- 7 Alarm2Button
- 8 AL1 ON/OFF
- 9 AL2 ON/OFF
- 10 PM Indicator
- 11 AL1 Indicator
- 12 AL2 Indicator
- 13 BT Indicator

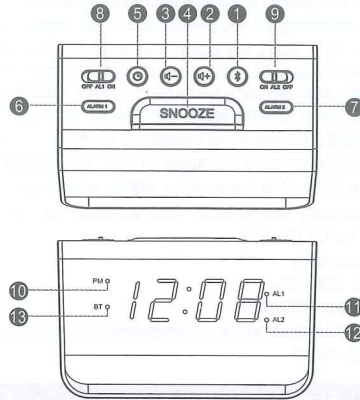

Get Started

Step 1: Insert the AC cord into a wall outlet.

Step 2: Battery backup. Insert 2 fresh AAA batteries into the clock.

Restart: If there is no reading on the LCD or the reading is distorted, unplug AC cord and remove batteries for 15 minutes. Press any button 20 times; after 15 minutes, start again at step 1.

Bluetooth Operation

1. Press the **BLUETOOTH®** button to enter Bluetooth mode.
2. The Bluetooth indicator light on the display will blink until there is connection with your mobile device.
3. Activate the Bluetooth function on your mobile device to pair with the clock. When connected, your mobile device will show "Equity 75910".
4. A tone will sound when pairing is complete. No code is required.
5. Use the + or – buttons to adjust the volume (8 levels).
6. Press the **BLUETOOTH®** button again to disconnect.

Note: If the clock is unplugged briefly and is plugged in again, the clock may lose Bluetooth connectivity.

Time Set

1. Hold the **TIME** button to enter time set mode.
2. The Hours will flash.
3. Press the + or – button to adjust the hours. The PM indicator will light when the hour is advanced into the PM time.
4. Press the **TIME** button to confirm and move to the minutes.
5. The Minutes will flash.
6. Press the + or – button to adjust the minutes.
7. Press the **TIME** button to confirm and exit.

Note: The clock will return to the time display if no buttons are pressed for 30 seconds.

Set Alarm 1/Alarm 2

Setting and activating the time alarms are separate actions.

Set Alarm 1:

ALARM 1

1. Hold the **ALARM 1** button to enter alarm set mode.
2. The Alarm Hours will flash.
3. Press the + or – button to adjust the hours. The PM indicator will light when the hour is advanced into the PM time.
4. Press the **ALARM 1** button to confirm and move to the minutes.
5. The Alarm Minutes will flash.
6. Press the + or – button to adjust the minutes.
7. Press the **ALARM** button to return to time mode.

Set Alarm 2:

Follow steps 1-8 above and use the **ALARM 2** button in place of the **ALARM 1** button.

Note: When the alarm sounds the Bluetooth function will be disabled.

Alarm 1/Alarm 2 ON/OFF

- Slide the **OFF-AL1-ON** button to activate or deactivate alarm 1.
- Slide the **ON-AL2-OFF** button to activate or deactivate alarm 2.

Snooze (temporarily silences alarm)

- When the alarm sounds, press the **SNOOZE** button to silence the alarm for about 9 minutes.
- Repeat the snooze feature up to 13 times (about 120 minutes).
- Press any button except snooze to silence the alarm for one day.

Nightlight

The clock has a nightlight below the time that stays on when operating on AC power.

USB Charging Port

Charge a smartphone, camera or other devices when the clock is plugged into a power outlet with the included 5V AC adapter.

Note: This is a power-output charging port. It does not supply power to the clock.

- Connect your external device's USB charging cable (not included) to the USB charging port.
- Charging times will vary.
- **USB Power Output:** 1A maximum current. Charge 1A devices or devices that are self-regulating.

Note: Some USB cables are for data transfer only and cannot be used for charging. Make sure that the USB cable you use will charge your device. Most USB cables included with mobile devices will work for charging.

Battery Backup

- 2-AAA LR3 Alkaline batteries.
- Maintains time and alarm function for several hours during power outage.
- Display will appear blank/dark.
- Time appears when AC power restored.

Specifications

Bluetooth Protocol:	A2DP (V1.2), AVRCP (V1), & HFP (V1.5)
Bluetooth Range:	32 feet, 10 meters (open air, no obstructions)
Bluetooth Frequency:	2.400GHZ-2.480GHZ
AC Power Cord:	TPK800500200-02 5V 2A
Backup Batteries:	2 AAA LR3 Alkaline batteries
USB Charging Port:	1 Amp maximum current (charging cable not included)

Care and Maintenance

- **Do Not Mix Old and New Batteries.**
- **Do Not Mix Alkaline, Standard, Lithium or Rechargeable Batteries.**
- Do not expose the clock to extreme temperatures, vibration or shock.
- Keep clock dry.
- Clean the clock with a soft damp cloth. Do not use solvents or scouring agents.
- The clock is not a toy. Keep it out of reach of children.
- The clock is not to be used for medical purpose or for public information, but is determined for home use only.
- The specifications of this product may change without prior notice.
- Improper use or unauthorized opening of housing will void the warranty.

Model: 75910 www.equitybylacrosse.com/supportPage | 3

- If the clock does not work properly, change the batteries and/or check the AC cord connection.

Warranty Information

This Equity product is warranted for one year from the date of consumer purchase against defects in material and workmanship. During this period such defects will be repaired, or the products will be replaced at Equity's option, without charge. This warranty does not cover damage caused by misuse or negligence. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING ONE YEAR FROM THE DATE OF PURCHASE.

Some states do not allow limitations on how long an implied warranty will last so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

For warranty work, technical support or other information contact:

Equity by La Crosse

Attn: Warranty

2830 S. 26th St.

La Crosse, WI 54601

Contact Support: www.equitybylacrosse.com/support

608-782-1610



FCC Statementon

This Device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) the device must accept any interference received, including interference that may cause undesired operation.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.

All rights reserved. This handbook must not be reproduced in any form, even in excerpts, or duplicated or processed using electronic, mechanical or chemical procedures without written permission of the publisher.

This handbook may contain mistakes and printing errors. The information in this handbook is regularly checked and corrections made in the next issue. We accept no liability for technical mistakes or printing errors, or their consequences.

"The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Equity by La Crosse is under license. Other trademarks and trade names are those of their respective owners."

Printed in China

Made in China

Model: 75910 www.equitybylacrosse.com/supportPage | 4

