

## DIRECTIONS

- Insert the battery into the tester facing the correct polarity.
- Make sure the battery and the tester are in good contact.
- Press down on the tester to make contact with the battery and refer to the indicator to determine the battery strength.
- Remove battery from the tester when testing is complete.