


# TWO DIGIT COMMERCIAL TIMER

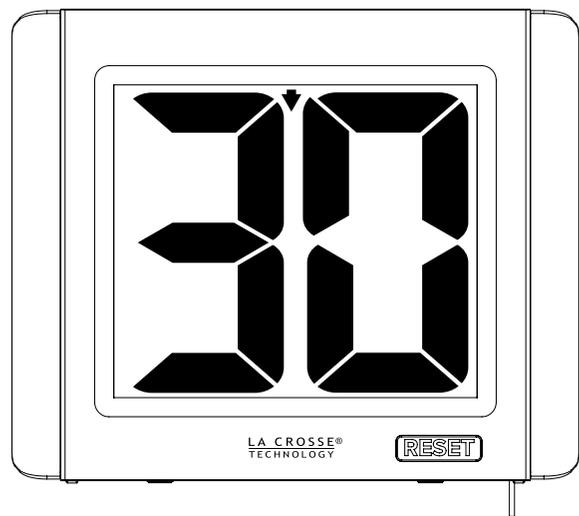


MODEL: 919-1614  
DC: 060319

Find more product information and support here: [bit.ly/laxtech\\_support](http://bit.ly/laxtech_support)

## SIMPLE 30 MINUTE TIMER

1. Insert the power cord into an outlet, then into your Commercial Timer.
2. Your timer will start counting down from 30 minutes. When timer is less than 1 minute, the countdown changes to seconds.
3. Press the RESET button to start a new 30 minute timer.

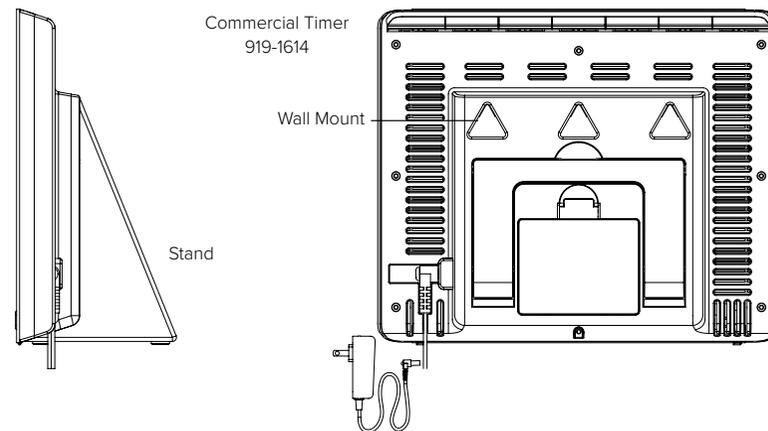

## POSITION TIMER

- Your timer comes with the stand attached for placement on a counter or other flat surface.
- Unscrew the stand to hang the timer on a wall.

## UNLOCK OTHER OPTIONS

- To access additional features, hold the CONTROL LOCK button until both the UP and DOWN arrows flash on screen.
- This will unlock or re-lock the top button functions.

## BUTTON FUNCTIONS

RESET	PLAY/PAUSE	COUNT DOWN	+ VOLUME	CONTROL LOCK	- VOLUME	COUNT UP	PRESET
<b>RESET (ON FRONT)</b>							
	<b>PLAY/PAUSE</b>						
		<b>COUNT DOWN</b>					
			<b>+ VOLUME</b>				
				<b>CONTROL LOCK</b>			
					<b>- VOLUME</b>		
						<b>COUNT UP</b>	
							<b>PRESET</b>

## ALARM


The Alarm will sound for 15 minutes unless the RESET button is pressed.

**Countdown Timer:** "00" will flash while alarm sounds.

**Count Up Timer:** Count Up Time ("45", "90", etc.) will flash while alarm sounds.

## ALARM VOLUME

When the alarm sounds press the + VOLUME or - VOLUME button to change the alarm volume. Level 1-10 will show briefly.

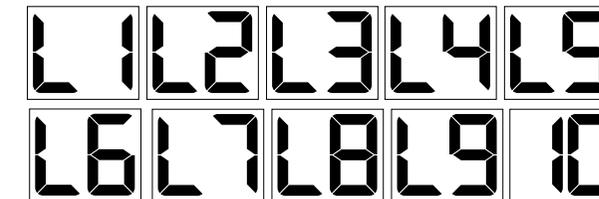

## PRESET TIMER

There are 8 Preset Timers to choose from: 5, 10, 15, 30, 45, 60, 75, and 90 minutes. The default is 30 minutes.

### Select Preset Timer:

1. When timer is paused, press the PRESET button to select timer.
2. Choose either the COUNT UP or COUNT DOWN button to achieve the following:

**COUNT UP:** The timer will count up from "00" until it reaches the preset time. The UP arrow will flash when active.


**COUNT DOWN:** The timer will count down to "00" from the preset time. The DOWN arrow will flash when active.



## CUSTOM COUNTDOWN TIMER

1. Hold the COUNT DOWN button until the numbers begin to flash.
2. Use the + or - button to adjust custom time accordingly.
3. Press the COUNT DOWN button confirm and exit. Your Countdown Timer will start automatically.
4. When timer reaches “00”, the alarm will sound continuously for 15 minutes or until RESET or PLAY/PAUSE are pressed.
5. Press the RESET button to restart the same Countdown Timer.


When timer is less that one minute, the countdown will change to seconds.

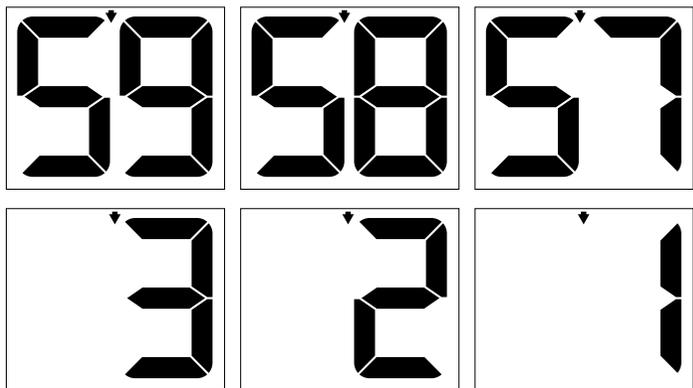

## CUSTOM COUNT UP TIMER

1. Hold the COUNT UP button until the numbers begin to flash.
2. Use the + or - button to adjust custom time accordingly.
3. Press the COUNT UP button confirm and exit. Your Count Up Timer will start automatically.
4. When timer reaches selected time, the alarm will sound for 15 minutes or until RESET or PLAY/PAUSE are pressed.
5. Press the RESET button to restart the same Count Up Timer.

**Volume:** When the alarm sounds press the + VOLUME or - VOLUME button to change the alarm volume.

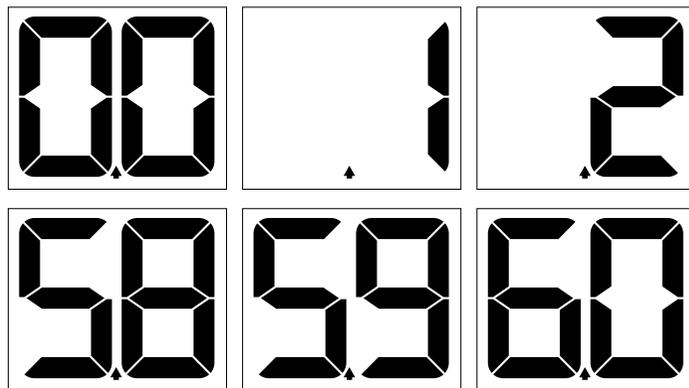

## PLAY OR PAUSE ANY TIMER

- Press the PLAY/PAUSE button to pause a timer or have it continue from the remaining time.
- An UP or DOWN arrow will flash in the direction an active timer is going, and be solid on screen when paused.

## WE'RE HERE TO HELP!

If you require additional support, get in touch with our friendly customer support team based out of La Crosse, WI.

Phone: 1.608-782-1610

Online: [bit.ly/contact\\_techsupport](https://bit.ly/contact_techsupport)

Our knowledgeable customer support team is available:

Monday-Friday, 8am-6pm CST.

## JOIN THE CONVERSATION

Ask questions, watch detailed setup videos, and provide feedback on our social media outlets!



## SPECIFICATIONS

**Power Requirements:** 5 volt power cord AC6: HX075-0501000-AU-001

**Timer:** (00 to 99 minutes)

**Dimensions:** 7.79" L x 3.07" W x 6.64" H (19.8 cm L x 7.8 cm W x 16.87 cm H)

## WARRANTY INFO

La Crosse Technology, Ltd. provides a 1-year limited time warranty (from date of purchase) on this product relating to manufacturing defects in materials & workmanship.

La Crosse Technology, Ltd  
2830 S. 26th St.  
La Crosse, WI 54601

For Full Warranty Details, Visit: [www.lacrossetechnology.com/support](http://www.lacrossetechnology.com/support)

## CARE + MAINTENANCE

- Do not mix old and new batteries.
- Do not mix Alkaline, Lithium, standard, or rechargeable batteries.
- Always purchase the correct size and grade of battery most suitable for intended use.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries have with correct polarity (+ / -).
- Remove batteries from equipment that will not to be used for an extended period.
- Promptly remove expired batteries.

## FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Increase separation between equipment & receiver.
  - Consult the dealer or an experienced radio/TV technician for help.
- This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

## CAUTION!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.

This booklet may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.

 **WARNING:** This product can expose you to chemicals including styrene, which is known to the State of California to cause cancer. For more information go to: [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)