

DUAL ALARM CLOCK

FRONT VIEW




USB Charge
Port 1 Amp
Output



BACK VIEW



**SIDE
VIEW**

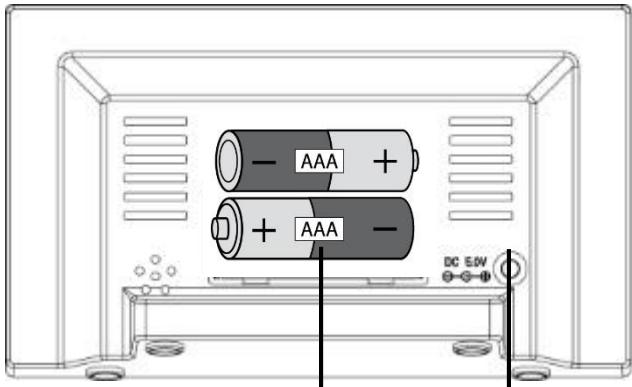


GET STARTED

Step 1: Insert 5 volt AC adapter into the wall then into the back of the alarm clock.

Step 2: Insert 2 new AAA Alkaline batteries (not included) into the alarm clock. Observe the correct polarity.

Restart: If there is no indoor temperature data after 60 seconds, unplug the AC adapter and remove batteries from the alarm clock, press any button 20 times. After 15 minutes, return to **Step 1** above.

LCD Features

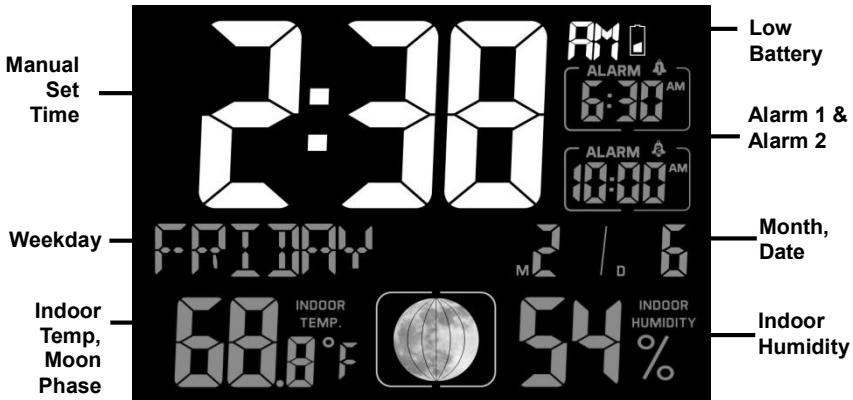


USB CHARGING PORT

Charge a smart phone, camera or other devices when the alarm clock is operating with the AC adapter.

Note: This is a power-output charging port. It does not provide power to the alarm clock.

- Connect your external device's USB charging cable (not included) to the USB charging port on the front of the clock.
- Charging times will vary.
- **USB Power Output:** 1A maximum current. Charge 1A devices or devices that are self-regulating.

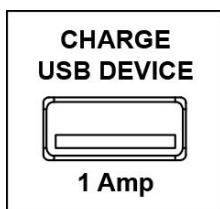

ADJUST BACKLIGHT HI/LOW/OFF

For a constant backlight you must use the AC adapter.

When using A/C power:

- Press the **SNOOZE/LIGHT** button to adjust the backlight between bright, dim and off.

SNOOZE
LIGHT

When using battery power only:

- Press the **SNOOZE/LIGHT** button for 10 second backlight.

SET TIME, DATE AND TEMPERATURE

- Hold the **SET** button to enter time set mode.
- Press the + or - buttons to adjust values.
- Press the **SET** button to confirm adjustments and move to the next item.

Time set order:


- Beep ON/OFF
- Hour
- Minutes
- Year
- Month
- Date
- Date Format (M/D or D/M)
- Fahrenheit/Celsius
- Weekday Language (English or Spanish)

SET

+

-

Press the **LIGHT/SNOOZE** button at any time to exit, or wait 20 seconds without pressing buttons to return to the normal time display.

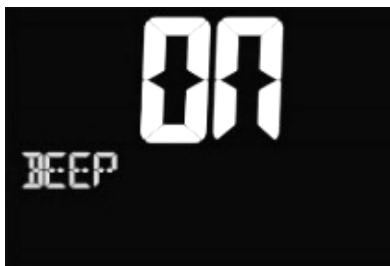

1. Beep ON/OFF



2. Set Hour




3. Set Minutes




4. Set Year



5. Set Month

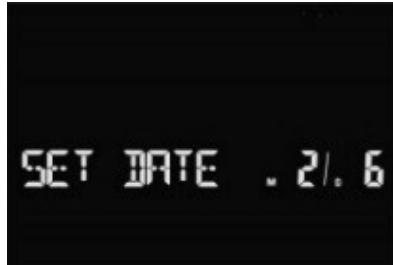

6. Set Date

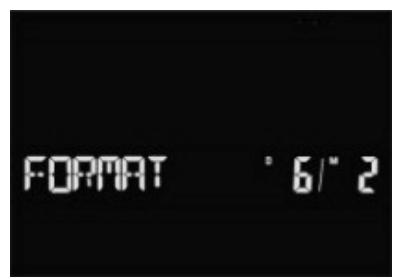

7. Set Format (M/D or D/M)



8. Set Indoor Temp Degrees



9. Set Weekday Language

<u>English</u>	<u>Español</u>
Monday	Lunes
Tuesday	Martes
Wednesday	Miercoles
Thursday	Jueves
Friday	Viernes
Saturday	Sabado
Sunday	Domingo

Languages


SET TIME ALARMS 1 & 2

Setting the alarm and activating the alarm are separate actions.

Alarm Time setting order: 1. Hours, 2. Minutes

Alarm 1:

1. Hold the **ALARM** button for 3 seconds to enter alarm time set mode.
2. Press the + or - buttons to adjust the alarm hour.
3. Press the **ALARM** button to confirm and set the minutes.
4. Press the + or - buttons to adjust the alarm minutes.
5. Press the **ALARM** button to confirm.

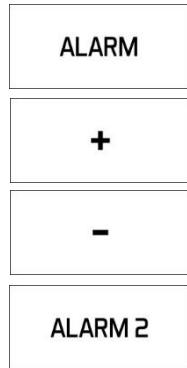

Alarm 2:

Repeat steps 1-5 using **ALARM 2** button.



TIP: Set one alarm for weekends and activate Friday night and deactivate Sunday night. Set the other for weekdays and activate Sunday night and deactivate Friday night.

ACTIVATE/DEACTIVATE TIME ALARMS

- From the live display, press and release the **ALARM** button to activate or deactivate alarm 1.
- From the live display, press and release the **ALARM 2** button to activate or deactivate alarm 2.
- The alarm time will show when the alarm is active.
- The word OFF will show when the alarm is not active.



SNOOZE (SILENCES ALARM TEMPORARILY)

- When alarm sounds, press the **SNOOZE/LIGHT** button to silence the alarm for 10 minutes.
- The snooze icon **Zz** will flash.
- In snooze mode, press the **ALARM** button to stop alarm for one day.

**SNOOZE
LIGHT**

Note: The alarm is crescendo sound. The alarm will sound for 2 minutes and then shut off completely if no buttons are pressed.

MOON PHASE



The moon phase is based on the lunar calendar and the year, month and date set. Most Internet moon phase calculations are based on the lunar calendar.

LOW BATTERY ICON

When the icon is displayed in the upper right-hand corner, replace batteries in the alarm clock.

Low
Battery
Icon



ALARM CLOCK CARE AND MAINTENANCE

- **Do not mix old and new batteries**
- **Do not mix Alkaline, Standard, Lithium or Rechargeable Batteries**
- Always purchase the correct size and grade of battery most suitable for intended use.
- Replace all batteries of a set at the same time.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed with correct polarity (+and -).
- Remove batteries from equipment which is not to be used for an extended period of time.
- Remove expired batteries promptly.
- Do not expose to extreme temperature, vibration or shock.
- Clean with a soft damp cloth. Do not use solvents.
- The specs of this alarm clock may change without prior notice.
- Improper use or unauthorized opening of housing voids warranty.
- If the alarm clock is not working properly, change the batteries and/or check the A/C adapter connection.

SPECIFICATIONS

Indoor:

Temperature Range: +32°F to +122°F (0°C to 50°C)

Humidity Range: 10% to 99% RH

Power:

Alarm Clock: 5V A/C power adapter (included)

AC adapter: HX06-0501200-AU

Battery backup; 2-AAA, IEC, LR3 batteries (not included)

Battery Life:

Battery Backup: Battery life is over 24 months when using the AC adapter for primary power

USB:

Output: 1 Amp maximum
(charging cable not included)

Dimensions:

Alarm Clock: 5.90" L x 1.89" D x 3.54 " H
(150 x 89.9 x 48.2 mm)

WARRANTY AND SUPPORT INFORMATION

La Crosse Technology, Ltd. provides a 1-year limited time warranty (from date of purchase) on this product relating to manufacturing defects in materials and workmanship.

Before returning a product, please contact our friendly customer support with questions or visit our online help (manuals and FAQS):

Phone: 1-877-408-2678

Online Product Support: www.lacrossetechnology.com/support

Product Registration: www.lacrossetechnology.com/support/register

View full warranty details online at:

www.lacrossetechnology.com/warranty_info.pdf

Warranty Address:

La Crosse Technology, Ltd

2830 S. 26th St.

La Crosse, WI 54601



FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences.

All trademarks and patents are recognized.