

Maintenance:

The battery should be replaced if the clock is no longer keeping time or alarm becomes weak or dysfunctional. Only use AA (1.5V) Alkaline batteries. Store the clock without a battery when not in use. A soft cloth or a paper towel may be used to clean your clock. Do not use any, corrosive cleanser or chemical solutions on the clock. Keep the clock Clean and dry to avoid any problems.

Two Year Warranty:

Equity products are warranted for two years from the date of consumer purchase against defects on material and workmanship. During this period such defects will be repaired, or the product will be replaced at Equity's option, without charge. This warranty does not cover damage caused by misuse or negligence. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF TWO YEARS FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

If your clock is not working, send it with a letter explaining the problem and \$5.00 for postage and handling to:

Equity Warranty Dept.

2817 Losey Blvd. S.

La Crosse, WI 54601




Please help in preservation of the environment and return used batteries to an authorized depot. Remove the battery from the clock if you do not intend to use for an extended period of time.

Made in China

Printed in China

Equity

**QUARTZ ALARM CLOCK
MODEL 21107/21109/21110**

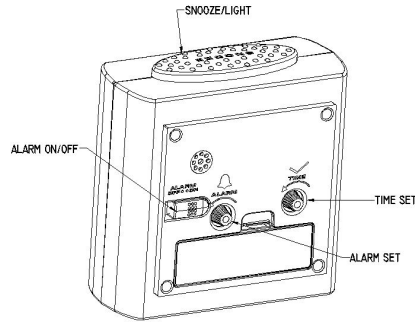

To activate the clock:

Open battery cover and insert one "AA" size battery observing the indicated polarity symbols.

To set the time : Turn the time setting knob in the direction of the arrow to set the hour and minute hands to the correct time.

To set the alarm time:

Turn the alarm setting knob in the direction of the arrow to set the alarm hand to the correct alarm time.

To activate/deactivate the alarm:

Slide the alarm on-off switch to the "AL.ON" position to activate the alarm. To deactivate the alarm, slide the alarm on-off switch to the "AL.OFF" position.

To use the snooze alarm feature:

Slide the alarm on-off switch to the "AL.ON" position. When the alarm sounds, press the snooze/light button, the alarm will stop and sound again after 5 minutes. This snooze function can be repeated again and again. To stop the Alarm/Snooze, slide the alarm on-off switch to the "AL.OFF" position.

To use the light:

Press the snooze/light button to light the dial.

