


Equity®

INSTA-SET LCD ALARM CLOCK

Model 31022

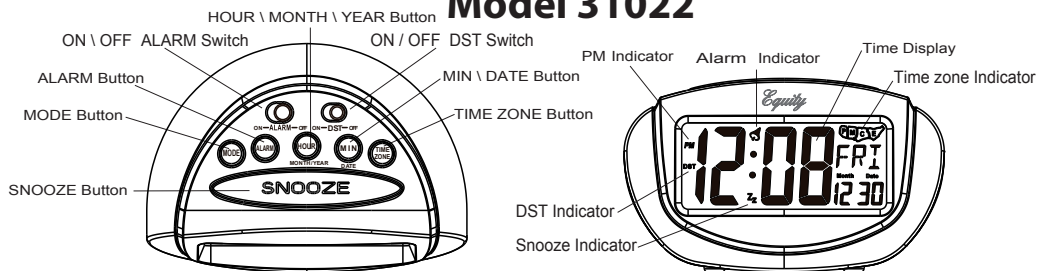

Please read this before operating your clock

Battery Installation

- * The battery compartment is located on the bottom of the clock. Remove the battery cover and insert two "AAA" batteries according to the polarity indication inside the battery compartment. Replace the battery cover. (Batteries not included)
- * After inserting batteries, the clock will automatically indicate the AM/PM Time, Year, Date & Month. The default Time Zone is Pacific Standard Time (PST)

Setting The Time Zone

- * Press & hold the **Time Zone** button one second to activate time zone setting. The time zone digits will flash indicating it needs to be set. Press **Time Zone** button to set the desired time zone.
- * Press & hold the **Time Zone** button one second to return to normal time display mode, or after 10 seconds it will automatically return to normal time display mode.

Setting The Time

- * Press & hold the **MODE** button one second to activate time setting.
- * Press the **HOUR/MONTH/YEAR** button to set the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- * Press the **MIN/DATE** button to set the correct minute.
- * Press & hold the **MODE** button one second to return to normal time display mode, or after 10 seconds it will automatically return to normal time display mode.

Setting The Calendar

- * After setting the time, press the **MODE** button one time. The Year digits will flash indicating it needs to be set. Example: Digit 16 represent year 2016. Press **HOUR/MONTH/YEAR** button to set the correct Year.
- * Press the **MODE** button once again, the Month, Date digits will flash indicating it needs to be set.
- * Press the **HOUR/MONTH/YEAR** button to set the correct Month.
- * Press the **MIN/DATE** button to set the correct Date.

Setting The Daylight Saving Time (DST)

- * Slide the **ON/ OFF** DST switch to the **ON** position. The **DST** indicator will light up.
- * Slide the **ON/ OFF** DST switch to the **OFF** position. The **DST** indicator will no longer be visible.
- * Do not turn the DST switch to **OFF** unless you live in an area which does not observe the Daylight Savings time change.
- * DST starts: Second Sunday in March at 2am. Example: 2am to 3am (+1 hour)
- * DST ends: First Sunday in November at 2am. Example: 2am to 1am (-1hour)

Setting The Alarm Time

- * Hold down the **ALARM** button and then press **HOUR/MONTH/YEAR** button to set the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- * Hold down the **ALARM** button and then press **MIN/DATE** button to set the correct minute. The PM indicator will light when the hour is advanced into the PM time.
- * Release the **ALARM** button when the correct alarm time is shown on the display.

Using The Alarm

- * Slide the **ON/ OFF** alarm switch to the **ON** position. The alarm indicator will light up.
- * Slide the **ON/ OFF** alarm switch to the **OFF** position to deactivate the alarm.

Using The Snooze

- * Press the **SNOOZE** button when the alarm sounds and the alarm will sound again in 5 minutes.
- * The snooze function can be repeated many times.

Using The Backlight

- * Press the **SNOOZE** button to activate the display backlight. The backlight will stay on for 5 seconds each time it is pressed.

Battery Warning

- * Clean the battery contacts and also those of the device prior to battery installation. Follow the polarity (+) and (-) when inserting battery.

FCC INFORMATION:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and the receiver.
- * Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- * Consult the dealer or an experienced radio/TV technician for help.
- * Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Please help in preservation of the environment and return used batteries to an authorized depot. Remove the battery from the clock if you do not intend to use for an extended period of time.



Two Year Limited Warranty (U.S.A.)

Equity products are warranted for two years from the date of consumer purchase against defects in material and workmanship. During this period such defects will be repaired, or the product will be replaced at Equity's option, without charge. This warranty does not cover damage caused by misuse or negligence. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

If your product is not working properly, please send:

- the product
- a letter explaining the problem
- and \$5.00 for postage and handling to:
Equity by La Crosse
Warranty Department
2830 26th St. S.
La Crosse, WI 54601

Made in China
Printed in China