


NOAA WEATHER RADIO Reliable Emergency Information AM/FM | ALERTS | WEATHERBAND

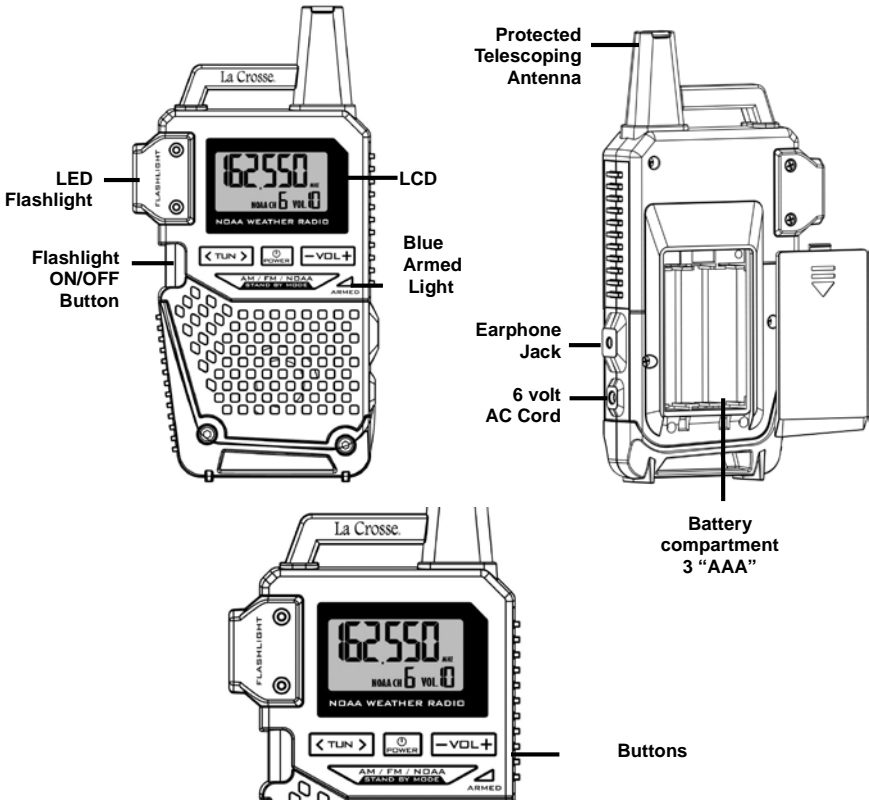

GET STARTED

Use battery power and/or A/C power for continuous operation.

- Step 1:** Insert the included 6 volt AC cord into the wall outlet then into the weather radio.
- Step 2:** Insert 3 new "AAA" batteries (not included) into the radio. Observe the correct polarity.
- Step 3:** Press the **POWER** button once to turn on the radio. The radio will default to weather band and volume level 10.
- Step 4:** Press the **TUNE** button to select a weather band channel.

RADIO MODES

The default mode is Weather Band (WB). While the radio is on, press the **AM/FM/NOAA** button to toggle between radio modes:

- WB radio
- FM radio
- AM radio



ALERTS*

The radio must be in WB mode (default) to receive alerts* automatically.

During an alert*:

- The **BLUE** backlight will change to RED.
- The blue **ARMED** light and RED backlight will flash quickly (every 2 seconds) for **5 minutes**.
- The volume will increase to level 16.
- Press the **VOLUME** button to adjust the volume as needed.
- Press the **AM/FM/NOAA** button to return to Stand By mode.



STANDBY

From WB mode, hold the **AM/FM/NOAA** button for 2 seconds to enter Weather Standby.

- The blue **ARMED** indicator flashes slowly (every 5 seconds).
- **Weather Alert:** the blue **ARMED** indicator will flash quickly (every 2 seconds).



WEATHER BAND RADIO-Reliable Emergency Information

The weather radio defaults to Weather Band. The radio receives 7 weather band (WB) frequencies for up-to-date weather information and public alerts.

- Press the **TUNE** button to change the WB channel frequency.



Radio receives 7 weather band (WB) frequencies:

Note: You may not receive all frequencies in your area.

Channel 1: 162.400MHz	Channel 5: 162.500MHz
Channel 2: 162.425MHz	Channel 6: 162.525MHz
Channel 3: 162.450MHz	Channel 7: 162.550MHz
Channel 4: 162.475MHz	

FM RADIO

- Fully extend the antenna
- With the radio ON, press the **AM/FM/NOAA** button to select FM radio.
- Press the **TUNE** button to increase or decrease the radio frequency.
- Hold the **TUNE** button to quickly search for the next available station.



AM RADIO

- Fully extend the antenna
- With the radio ON, press the **AM/FM/NOAA** button to select AM radio.
- Press the **TUNE** button to increase or decrease the radio frequency.
- Hold the **TUNE** button to quickly search for the next available station.



VOLUME

- Press the **VOLUME** button to adjust the volume.
- Hold the **VOLUME** button to change faster.
- Default volume is 10. Levels 1-16 are available.



LCD BACKLIGHT

- This radio has a high visibility BLUE color backlight for normal viewing.
- Backlight color changes to RED during a Weather Alert.
- Red backlight will flash every **2** seconds for 5 minutes during a weather alert.
- Blue backlight turns on for 10 seconds when any button is pressed.

EARPHONE USE

- Privately listen to the radio with a set of 3.5mm earphones (not included). There is a 3.5mm earphone jack on the side of the radio.

PROTECTED TELESCOPING ANTENNA

- Fully extend the protected telescoping antenna to receive a strong WB, FM or AM radio signal.
- Place the radio near a window when indoors for best reception.



WHITE LED FLASHLIGHT

- Press the **LIGHT** button on the side of the radio to operate the very bright LED flashlight.
- The super bright LED flashlight is a full 1/2 watt.



POWER BUTTON

- Press and release the **POWER** button to turn the radio ON or OFF.

Note: The radio saves the last channel you are listening to, mode and volume used when turned off.



SPECIFICATIONS

Dimensions: 3.04" L x 5.89" H x 1" D (77.3 L x 149.8 H x 25 D mm)

Weather Band

(7 Channels): -6dB 162.4000 - 162.5500MHz

AM: 82dB 520-1710KHz

FM: 10dB 87.5 -108 MHz

A/C Cord: 6 volt (included)

Battery: 3 x AAA LR3 Alkaline (not included)

Battery Life: 36 months with power off
22-24 hours in Weather Stand By mode

Operating

Temperature: 32 °F - 122°F (0 °C – 50 °C)

Storage

Temperature: 14 °F - 122°F (-10 °C – 50 °C)

Light: Super bright flashlight. Full 1/2 Watt white LED

Backlight: High visibility blue backlight changes to red for Weather Alerts

Antenna: 6" Protected telescoping antenna

Jack: 3.5 mm Earphone Jack

Lanyard: Hands free lanyard included.

MAINTENANCE AND CARE

- **Do not mix old and new batteries**
- **Do not mix Alkaline, Standard, Lithium or Rechargeable Batteries**
- Always purchase the correct size and grade of battery most suitable for intended use.
- Replace all batteries of a set at the same time.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed with correct polarity (+and -).
- Remove batteries from equipment with is not to be used for an extended period of time.
- Remove used batteries promptly.
- Extreme temperatures, vibration, and shock should be avoided to prevent damage to the radio.
- Clean with a soft, damp cloth. Do not use solvents or scouring agents; they may mark the radio.
- Do not submerge the weather radio in water.
- Opening the casing invalidates the warranty.

- Do not try to repair the unit.
- Do not leave in vehicle in extreme temperatures.
- Radio is not waterproof.

*** DISCLAIMER**

La Crosse McCormick, LLC. ("La Crosse") provides various alert options to aid users. La Crosse shall not be liable for accuracy, usefulness or availability of information transmitted via the service. Users are solely responsible for damages to persons or property by service use.

FCC

This Device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) the device must accept any interference received, including interference that may cause undesired operation.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT

WARRANTY

La Crosse McCormick, LLC warrants that if the accompanying product proves to be defective to the original purchaser in material or workmanship within 1-year from the original retail purchase, La Crosse McCormick, LLC will, at La Crosse McCormick, LLC 's option, either repair or replace same without charge (but no cash refund will be made).

CONDITIONS

1. You must deliver mail or ship the product, together with the original bill of sale and this limited warranty statement as proof of warranty.
2. This warranty is void if any defects are caused by abuse, misuse, negligence or unauthorized repairs.
3. All liability for incidental or consequential damages is specifically excluded. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Limitation of Liability and Remedies

La Crosse McCormick, LLC shall have no liability for any damages due to loss of profits, loss of use or anticipated benefits, or other incidental, consequential, special or punitive damages arising from the use of, or the inability to use, this product, whether arising out of contract, negligence, tort or under any warranty, even if La Crosse McCormick, LLC has been advised of the possibility of such damages. La Crosse McCormick, LLC's liability for damages in no event shall exceed the amount paid for this product.

SERVICE PROCEDURE

Please follow the procedure below to ensure the radio is properly serviced and returned. Failing to follow the procedures may result in delays or loss of product.

- 1. PROOF-OF-PURCHASE:** Include some form of proof-of-purchase.
- 2. RADIO:** Enclose the NOAA Weather Radio.
- 3. PROPER PACKING:** Pack the radio securely to prevent damage during transit. Use original packing material if possible.
- 4. PROBLEM DESCRIPTION:** Enclose a detailed written description of the problem.
- 5. CONTACT INFORMATION:** Enclose a typed or clearly printed name, address, and phone number where you can be contacted during the day M-F.
- 6. PREPAID TRACEABLE CARRIER:** Ship the package with the contents listed above, prepaid and insured by way of traceable carrier (to avoid loss in transit). The Manufacturer is not responsible for units not received if the package has not been properly insured.

MAIL TO:

La Crosse McCormick
Warranty Department
2830 South 26th St.
La Crosse, WI 54601

- 7. REPAIR/EXCHANGE:** The radio will be repaired or exchanged upon its receipt if it is under warranty.
- 8. SERVICE TIMELINE:** Please allow approximately 2-4 weeks for the radio to be serviced under warranty.

Contact Support:

1-608-782-1610

Product Registration:

www.lacrosseclock.com/register

Online:

www.lacrosseclock.com/support

