



## Alarm Clock Charging Station with 2 USB Charging Ports

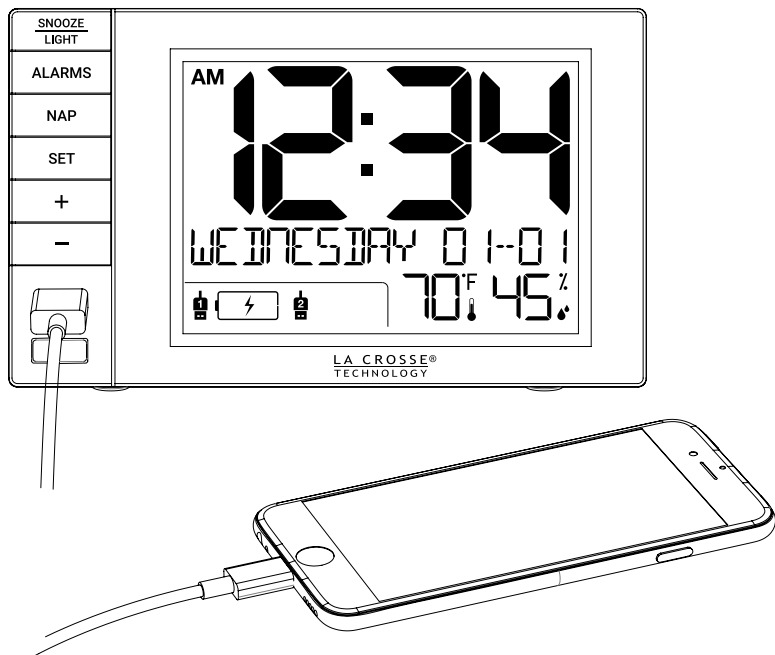

## Table of Contents

LCD Features .....	1
Setup .....	1
Settings: Language, Time, Date, etc. ....	2
Nap Feature .....	3
Backlight (HI-LOW-OFF) .....	3
USB Charge Ports .....	4
Time Alarm .....	4
Set Alarm 1 .....	5
Activate/Deactivate Alarm .....	5
Snooze .....	6
Low Battery Icon .....	6
Care and Maintenance .....	6
Specifications .....	7
Warranty and Support .....	7
FCC Statement .....	7


# LCD Features

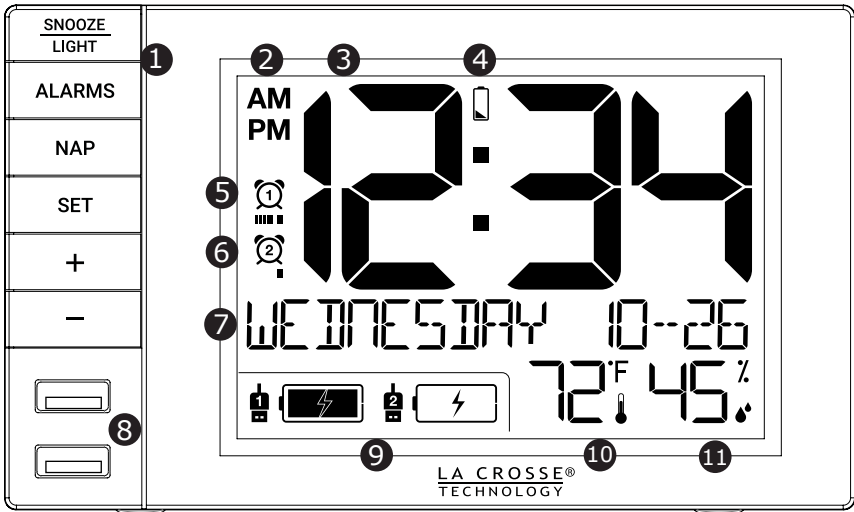

- 1 Buttons
- 2 AM/PM
- 3 Time (manual set)
- 4 Low Battery
- 5 Alarm 1 (M-F)
- 6 Alarm 2 (Weekend)
- 7 Calendar | Nap duration | Snooze duration
- 8 USB Charge Ports
- 9 Charge Symbols
- 10 Indoor Temperature
- 11 Indoor Humidity

## Setup

1. Insert the 5.0 volt power cable into the outlet, then into the clock.
2. (Optional): Insert 2 AAA batteries (not included) into the clock.
3. Set language, time, calendar, temperature unit, and snooze duration.

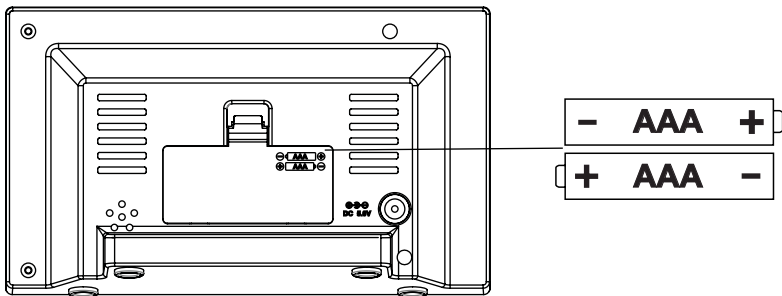

## Settings: Language, Time, Date, etc.

- Hold the **SET** button to enter time set mode.
- Press the **+/-** buttons to adjust the values.
- Press the **SET** button to confirm adjustments and move to the next item.
- Press the **SNOOZE/LIGHT** button at any time to exit settings.

### Time set order:

1. Language (English or Spanish)
2. Beep ON/OFF
3. Hour
4. Minutes
5. Year
6. Month
7. Date
8. Fahrenheit/Celsius
9. Snooze duration (5 minutes-120 minutes)

**Note:** When Español is selected, the instructions on the screen will be in Spanish.

**Begin:** Hold the **SET** button for 3 seconds. ENGLISH will show. Press the **+/-** buttons to change.

Language

ENGLISH

ESPAÑOL

Beep ON | OFF

BEEP ON

BEEP OFF

Hour | Minutes

AM  
12  
:00  
HOUR

:34  
MINUTES

Year | Month | Date

YEAR 20 16

MONTH 0 1

DATE 0 1

Fahrenheit | Celsius

TEMP °F

TEMP °C

Snooze Duration

SNOOZE


10

## Nap Feature

Sometimes, we just want a quick nap without having to set a new alarm. Set the nap duration one time, then, a simple press of the **NAP** button starts the nap countdown.

### Set Nap Duration:

1. Hold the **NAP** button for 3 seconds. **NAP** and the duration will show (default is 10 minutes).
2. Use the **+/-** buttons to select a nap duration (up to 120 minutes).
3. Press the **NAP** button to confirm and start nap count down to zero.
4. Press the **SNOOZE/LIGHT** button at any time to exit settings.

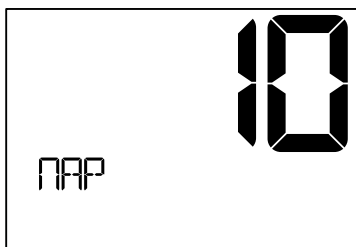

### Ready for a Nap?

Press the **NAP** button once, and the clock will wake you at the preselected time.



Nap  
Duration

Nap  
Countdown  
Complete



- Press the **NAP** button once to start the countdown.
- **NAP** and the time will show in minutes and seconds.
- Minutes and seconds will countdown.
- When the alarm sounds **NAP** and **00m 00** will flash. The alarm will sound for two minutes and then stop if no buttons are pressed.
- Press any button except **SNOOZE/LIGHT**, at any time to exit nap settings.




## Backlight (HI-LOW-OFF)

- When operating with the power cable, the backlight is adjustable: HI-LOW-OFF.
- Press and release the **SNOOZE/LIGHT** button to adjust backlight.
- When operating on batteries only, the backlight will come on briefly when the **SNOOZE/LIGHT** button is pressed.

## USB Charge Ports

**USB Output:** Up to 3 Amps total if both ports are used

- Charge devices that self-regulate.
- Do not charge multiple devices from the same USB port.
- Must operate clock with power cable to charge other devices.
- Plug your device into one of the USB ports on the front of the clock.
- The clock will show HELLO for 3 seconds.
- The lightning bolt will flash while charging.
- When battery is full and minimal power is drawn, a solid battery icon is displayed.
- When no device is connected, no battery will show.

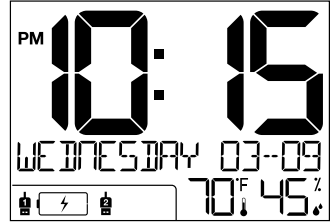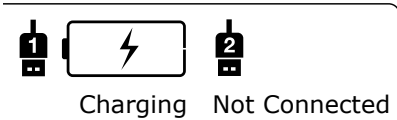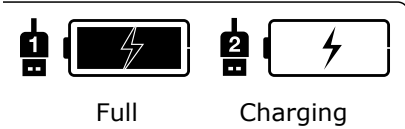

### **IMPORTANT:**

- When two devices are plugged into the clock (USB1 and USB2) charging port at the same time, and the total current output is 3A for both ports combined.
- If only one device is plugged into the clock (USB1 or USB2) charging port, the maximum current output can reach 2.4A.

## Time Alarm

Alarms will be active when time and type are set.

- Press and release the **ALARMS** button once for alarm 1 or twice for alarm 2.
- With alarm time showing, hold the **ALARMS** button for 3 seconds to enter alarm 1 settings.
- Set the time then select alarm type:
  - Mon-Fri**-Will alarm Monday through Friday when active.
  - Weekend**- Will alarm Saturday and Sunday when active.
  - Daily/Single**-Will alarm at the same time every day when active.

### **Active Alarm Icons:**





## Set Alarm 1

**TIP:** First set the alarm time, then select alarm type for each alarm.

1. Press and release the **ALARMS** button once for alarm 1.
2. With alarm time showing, hold the **ALARMS** button for 3 seconds to enter alarm time set mode.
3. Press the **+/-** buttons to adjust the alarm hour.
4. Press the **ALARMS** button to confirm and move to the minutes.
5. Press the **+/-** buttons to adjust the alarm minutes.
6. Press the **ALARMS** button to confirm and move to alarm type.
7. The date area will show TYPE.
8. Use the **+/-** to select MON-FRI, WEEKEND, or SINGLE alarm.
9. Press the **ALARMS** button to confirm and exit settings.

Hour | Minutes



Type

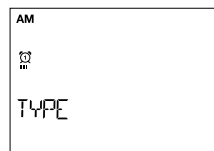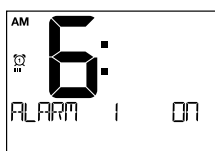

Mon-Fri

Weekend

Daily/Single

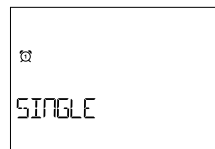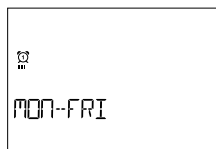

## **Set Alarm 2:**

- Press and release the **ALARM** button to select ALARM 2.
- Follow steps 1-9 above. (Default is WEEKEND)


## Activate/Deactivate Alarm

Alarms will be active when time and type are set.

1. Press and release the **ALARM** button to select Alarm 1 or Alarm 2
2. Press the **SET** button to deactivate or activate the selected alarm.
  - When active, the alarm icon will appear.
  - Alarm icon will flash when alarm sounds.
  - When alarm sounds, press any button except for **SNOOZE/LIGHT** to stop ringing for one day
  - When alarm sounds, press the **SNOOZE/LIGHT** button to stop ringing and activate SNOOZE function.

## Snooze

- When the alarm sounds, if **SNOOZE** is pressed, SNOOZE - duration will show in date area.
- During snooze count down, press any button except for **SNOOZE/LIGHT** to exit snooze count down
- During snooze count down, press **SNOOZE/LIGHT** only to change backlight.
- When snooze alarm sounds, SNOOZE – duration “00m 00” will flash, press any button except for **SNOOZE/LIGHT** to stop ringing and exit snooze function.
- **Repeat snooze:** When snooze alarm sounds, SNOOZE – duration “00m 00” will flash. Press **SNOOZE/LIGHT** button to stop ringing and activate the snooze function again.

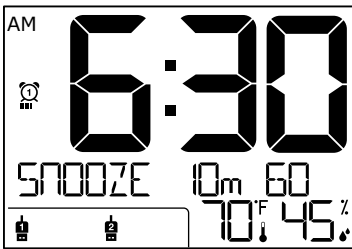

The snooze duration will show and countdown to zero.

GOOD MORNING will show for 3 seconds when you deactivate the sounding alarm or the sounding snooze alarm.

## Low Battery Icon

- The low battery icon will appear between the hour and minutes.
- This icon indicates it is time to replace the batteries.

## Care and Maintenance

- Do not mix old and new batteries.
- Do not mix Alkaline, Standard, Lithium, or Rechargeable Batteries.
- Always purchase the correct size and grade of battery most suitable for intended use.
- Replace all batteries of a set at the same time.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed with correct polarity (+ and -).
- Remove batteries from equipment when it is not used for extended period.
- Promptly remove expired batteries.

# **Specifications**

**Temperature Range:** 32 °F to 99°F (0°C to 37°C)

**Humidity Range:** 10%RH to 99%RH

**Power:** 5.0V AC6: HX36-0503500-AU

Optional-2-AAA, IEC, LR3 batteries (not included)

**USB Output:** up to 3 Amps combined

**Battery Life:** Battery life is over 24 months with reputable batteries

**Dimensions:** 5.89" W x 3.51" H x 1.98" D (149.83 x 89.58 x 50.44mm)



# **Warranty and Support**

La Crosse Technology, Ltd. provides a 1-year limited time warranty (from date of purchase) on this product relating to manufacturing defects in materials & workmanship.

**Before returning a product, please contact our friendly customer support with questions or visit our online help:**

**Phone:** 1-855-605-6888

**Online Product Support:**

[www.lacrossetechnology.com/support](http://www.lacrossetechnology.com/support)

**Product Registration:**

[www.lacrossetechnology.com/support/register](http://www.lacrossetechnology.com/support/register)

**View full warranty details online at:**

[www.lacrossetechnology.com/warranty\\_info.pdf](http://www.lacrossetechnology.com/warranty_info.pdf)

**Warranty Address:**

La Crosse Technology, Ltd

2830 S. 26th St.

La Crosse, WI 54601

# **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

**Operation is subject to the following two conditions:**

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

## **Caution!**

The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher. This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences.

All trademarks and patents are recognized.